TATUNG

User Manual Guide

IP Phone 100

Taiwan Telecommunication Industry CO., LTD.

Chapter 1 Introduction 3
＊Product Description 4
1.Features and Specification 4
2.Appearance 6
1.Front View and Keypad function 6
2.Back View 8
3.Specification of connector 9
Chapter 2 Operating Procedure – LCD Display Configuration 10
1.Initialize IP Phone 100 10
2.LCD Configuration 11
Chapter 3 Advanced Configurations via Telnet 17
1. [help] command 17
2. [quit] command 18
3. [reboot] command 18
4. [flash] command 18
5. [commit] command 19
6. [ifaddr] command 19
7. [time] command 20
8. [ping] command 20
9. [pbook] command 21
10.[pppoe] command 22
11.[sysconf] command 23
12. [h323] command 24
13. [voice] command 26
14. [tos] command 27
15. [tone] command 28
16. [support] command 29
17. [bureau] command 29
18.[rom] command 30
19.[passwd] command 32
Chapter 4 Web Configuration 33
Step 1. Browse the IP Address predefined via RS-232 33
Step 2. Input the login name and password 34
Step 3. The web interface main screen 34
Step 4. Start configure 35
1.Network Interface 35
2. H323 Information 37

3. System Configure.....39
4. PPPoE Configure 40
Chapter 5 Upgrade the IP Phone 100.....52
＊Download Procedure.....52
1.LCD Panel Control 52
2.Remote Control: Telnet.....53
3.Web Management 54

Chapter 1 Introduction

The IP Phone 100 is a full-featured IP-based telephone system, which provides VoIP service on LAN or any IP based environment. By using IP environment for voice communication, company or individual can save lots of expenses and make data and voice network converged.

IP Phone 100 also supports PSTN analog line connection. Therefore, it can perform as the same as traditional POTS (Plain Old Telephone Service).

✳Product Description

1.Features and Specification

Basic Features:

- ITU-T H.323 v3 compliance
- DTMF detection/generation
- TFTP/FTP software download
- Remote configuration/reset via Telnet
- LED indication for system status：Speaker, Hold ,Mute , Message , PSTN
- Network Interface :
  - Switch Hub inside, providing 2 RJ-45 sockets for 10/100Base-T connection
  - 1 RJ-11 socket for PSTN connection
- Microsoft Net Meeting v3.0 compatible
- SNTP (Simple Network Time Protocol)
- Call HOLD/TRANSFER/FORWARD/MUTE
- PSTN/IP side access switch
- 10 Direct Line Button for speed dial
- Speaker Mode
- System Configuration from keypads and displayed on LCD
- Ring Tone selection
- Password setting for security
- Function Keys : Speaker , Redial , Mute , Hold , Transfer , Forward , Message , PSTN
- Ten sets last Phone Number redial
- Dial plan
- Provide TOS(Type Of Service) function
- GateKeeper mode or Peer to Peer mode selection

Caller ID:

- IP side display H323-ID and E.164.
- Display the count of total call received.
- Display un-answered call name, number.
- Show caller's name, number, calling time.

Volume Adjustment:

- Speaker volume level adjustable.
- Handset Receiver volume level adjustable.

LCD:

- 2 lines, 24 character Dot Matrix display.
- Indicator messages of HOLD, MUTE, PSTN, Directed Line 1~10.
- Display current date and time.
- Display of call duration.

Audio features:

- Codec -- G.711 a/ μ law, G.723.1 (6.3Kbps),G.729, G.729a
- VAD (Voice Activity Detection), CNG (Comfort Noise Generate)
- G.168/165-compliant adaptive echo cancellation
- Dynamic Jitter Buffer
- Bad Frame Interpolation
- Provide H.245 Out-band DTMF message
- Call Transfer (H.450.2)
- Call Forward (H.450.3)
- Call Hold (H.450.4)
- Gain (Voice Volume) Settings
- Provide Call Progress Tone: Dial tone, busy tone, call-holding tone and ring-back tone

Firmware Upgrade:

- Firmware version displayed on LCD.
- Two ways to upgrade firmware:
  - Download by KEYPAD configuration.
  - Download by Telnet.

Management Features:

- Two easy ways for system configuration
  - TELNET
  - IP Phone 100 KEYPAD (can only upgrade application rom file)
  - Web Browser
  - Management Center(only simple configuration)

2.Appearance

1.Front View and Keypad function

- **C**: Cancel and Clear
- ←→ : Move to left /previous and right/next .
- **OK**: Press OK to confirm the modification.
- **Direct Line (DL) Button 1 – 10**: User press DL button to do speed dial according to phone book data 1-10 (please refer to LCD configuration-Phone Address Book or Advanced Configurations via Telnet-[pbook] command).

- **Number 1 –10, * and #**: The function is as the same as the general phone set.

Corresponding list of keypad and symbol:

1	“Space” ; “,” ; “.” ; “!” ; “1”
2	“A” ; “ B” ; “C” ; “2”
3	“D” ; “E” ; “F” ; “3”
4	“G” ; “H” ; “I” ; “4”
5	“J” ; “K” ; “L” ; “5”
6	“M” ; “N” ; “O” ; “6”
7	“P” ; “Q” ; “R” ; “S” ; “7”
8	“T” ; “U” ; “V” ; “8”
9	“W” ; “X” ; “Y” ; “Z” ; “9”
*	“-“ ; “?” ; “*”
0	“0”
#	“_” ; “@” ; “#”

- **MUTE**: Mute the voice of MIC and let others can’t hear from user in communication.
- **PSTN**: Press PSTN to switch IP Phone 100 as PSTN or IP Phone Mode. In PSTN mode, “PSTN” characters will be displayed on LCD left bottom side, then users can dial out as if standard telephone set in PSTN ; in IP Phone mode , “GK” characters will be displayed on LCD left bottom side.

Note:1. When IP Phone is in PSTN mode, only* PSTN *and* SPEAKER *function key can work.

2. On LCD will display ”….Incoming Call…. ” to notice user when IP Phone has both IP and PSTN side incoming calls.

3. If in communication with IP side, user can press* HOLD *to hold IP side, then press* PSTN *to pick up PSTN side, after that can press* HOLD *again to retrieve IP side.

***4. If in communication with PSTN side, user must hang up PSTN side before pick up IP side by pressing* PSTN.**

- **HOLD**: To hold a call with H.450 function.
- **SPEED**: Press SPEED and number (Phone book index) to do speed dial according to phone book data (please refer to LCD configuration-Phone Address Book or Advanced Configurations via Telnet-[pbook] command).
- **FORWARD**: Forward a incoming call to another IP device by H.450 forward function.(please refer to LCD configuration-Indicate Forward Type)
- **MESSAGE and its indicated LED light**: When missing the incoming calls, the message LED will be flashing. User can know the information of miss call by pressing the message button.
- **TRANSFER**:

1. Transfer a call by H.450 transfer function. Press TRANSFER button in communication and press phone No. which user want to transferred to can transfer this call .
2. Change characters to be capital or lowercase: when press TRANSFER before press letters can switch type of letters.

- **REDIAL**: Redial the last outgoing call.
- + and - : Adjust the voice volume in communication.
- **SPEAKER**: Speaking without picking up handset.

Note: All function keys mentioned above (except Number 1 –10, * and #) are effective only in IP Phone mode.

2.Back View

- **DC 9V**: DC 9V power input outlet
- **LAN**: RJ-45 connector, connected directly to the **Hub** through the **straight** CAT-5 cable.
- **PC**: RJ-45 connector, connected directly to the **PC** through the **straight** CAT-5 cable
- **Line**: RJ-11 connector, connected directly to the PSTN analog line.

Note: There are two LED indicated lights: LINK/ACT and 10/100 for LAN port and PC port. When network status is in normal, LED of LINK/ACT will be flashing; when transmit rate is in 10 mbps/100mbps, LED of 10/100 will light off/on .

3.Specification of connector

1、Ethernet Port：

Ethernet port is for connecting IP Phone to network, transmit rate supports 10/100 Base-T.

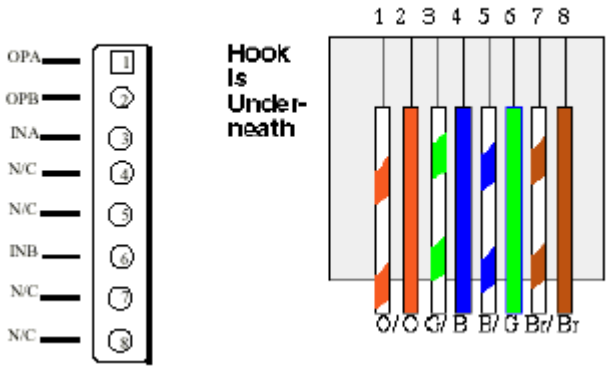

Ethernet connector（LAN）

2、RJ11connector：

RJ11 connector is for connecting IP Phone with PSTN.

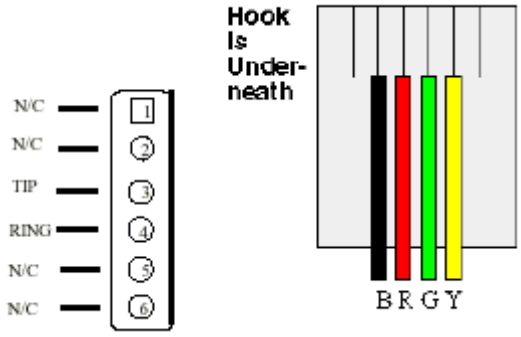

RJ11connector

Chapter 2 Operating Procedure – LCD Display Configuration

1.Initialize IP Phone 100

1. When power on the IP Phone 100, the LCD screen shows as below.

2. Wait around one minute until the IP Phone 100 finishes boot program initialization.
3. User can see flashing greeting as below:



4. Then IP Phone get into standby mode:



The main LCD screen would be shown as similar as above. The GK word means the IP Phone 100 is in GateKeeper Mode, and when IP Phone is connected to SNTP server, on LCD will show current time from SNTP server.

5. After pressing the **PSTN** button, the GK word will be replaced by PSTN. Then IP Phone is in PSTN Mode. Please notice that in PSTN mode user must plug PSTN line in RJ-11 port.



Press ← or → to enter configuration mode then press **OK** Bottom to enter certain menu. There are 6 selections for configuration.

1. System Configuration (mandatory, protected by password)
2. User Line Number (mandatory)
3. Ring Configuration
4. Indicate Forward Type
5. Message Box
6. Phone Address Book

Note: ***LCD Panel of IP Phone 100 is operated manually by moving ← or → on the keypad. Press OK to enter separate configuration menu. Press C to go back to the main menu.***

2.LCD Configuration

User can set the following 10 configurations manually by operating the commands displayed on LCD.

Note: Any configurations that have made for the IP Phone 100, user has to do **Reboot** in the selection 1→5 “Reboot”.

1. **System Configuration (mandatory, protected by password)**
   - **Please Enter Password:**
     User must key in password to enter this menu, selections under this command are all important ones, which can only be configured by administrators.

Note: Password to enter System Configuration:
H.323 token password (please refer to item 9), default value is **x**

1. **Connect Configuration**
   There are ten sub-configurations included in **Connect Configuration**. It is necessary for user to set it in order to run the IP Phone 100 correctly.

In addition, user has to prepare one valid IP Address to meet your network environment. (Global public IP Address or Virtual IP Address)

(1) IP address
In this configuration mode, user presses the prepared IP Address on the IP Phone keypad. Please input IP address as format: xxx.xxx.xxx.xxx.

(2) Subnet Mask:
User has to press the subnet mask IP Address on the IP Phone keypad**.**

(3) Gateway
User has to press the default gateway IP which meets IP Address on the IP Phone keypad.

(4) Primary DNS
User can set IP address of Domain Name Server, then for GateKeeper and Phone book can enter URL address or IP address. Please refer to **3.9 [pbook]** and **3.12 [h323]** command.

(5) Secondary DNS
User can set IP address of secondary DNS, once primary DNS cannot work normally, IP Phone can refer to secondary DNS.

(6) GateKeeper
User has to offer one available GateKeeper server IP Address and set this IP Address on the IP Phone keypad.

(7) Second GateKeeper

IP Phone provide alternative GateKeeper feature, if IP Phone can't register to Main GateKeeper for 10 times, it will try to register to the Second GateKeeper. When main GateKeeper can't work normally, IP Phone can still keep working with Second GateKeeper

(8) SNTP Configuration

IP Phone 100 supports that user can assign one SNTP (Simple Network Time Protocol) Server in your country by setting in IP Phone. User has to offer one available SNTP server IP Address and set this IP Address on the IP Phone keypad.

(A) SNTP Mode: User can set different time can set SNTP function too be on/off/broadcast, which means IP Phone will capture current time from SNTP server or not, or broadcast to find a SNTP server and capture current time.

(B) SNTP Server: User can specify a SNTP server for IP Phone to capture current time.

(C) Time Zone: User can set time zone according to the location IP Phone is. For example, in Taiwan the time zone should be set as 8,which means GMT+8.(user can press "*" as "-")

Note: If user didn't set SNTP server, on LCD won't display current time.

(9) Connection Mode

There are 2 types for IP Phone 100 to connect to the other devices. They are **GK**, **P2P.** The default mode is in GK mode. When user would like to connect via P2P mode, the IP Phone 100 must change as well. Move the "~" symbol by press ← or → on the keypad to select one mode.

(10) DHCP Mode (ON/Off)

User can set IP Phone in DHCP mode, which means IP Phone will get a dynamic IP automatically.

(11) Token Password

(A) LCD menu password: User can enter LCD system configuration by key in this password

(B) H.235 security: To set RRQ/ARQ authentication token password. If IP Phone wants to register to a GateKeeper, which implement H.235 security token feature, IP Phone has to set a RRQ/ARQ authentication token password, which is provided by GateKeeper manager. IP Phone can't work normally with this GateKeeper unless Token Password is set.

(12) Management Center

Set management center IP address. IF user specifies management center IP address, IP Phone will connect and send information to management center, let user can easily configure via management center interface.

Note: 1.management center is our optional software to help user can easily configure our products, please contact your reseller to know more about it.
2.If user wants to disable Management Center function in LCD menu, use can key in IP address 255.255.255.255.

(13) GRQ Option

To set auto discovery function OFF or ON. If this function is enabled and IP address of GateKeeper is set as 255.255.255.255, IP Phone will multicast to search a GateKeeper on network with configured GateKeeper ID(please refer to **(12)Gatekeeper ID**); if IP address of GateKeeper is set, before IP Phone register to the assigned GateKeeper, it will send out GRQ(GateKeeper Request) message with configured GateKeeper name to GateKeeper first.

(14) GateKeeper ID

To set GateKeeper name for GateKeeper discovery. When IP Phone send out GateKeeper discovery message will search GateKeeper with this GateKeeper name

2. User Line Name

User has to identify one ID name for the IP Phone 100 to register to the GateKeeper.

3. Firmware Update

(1) Download method

There are two methods to download new rom file, please move the "~" symbol by press ← or → on the keypad to select TFTP or FTP method, then press OK to confirm it.

(2) Set File Server IP

User has to offer one TFTP/FTP server IP Address and set this IP Address on the IP Phone keypad. The IP Address is necessary for upgrading IP Phone new application rom file.

(3) Set FTP user account

User has to press user name and password for FTP server login .It is necessary for upgrading IP Phone new application rom file in FTP method.

(4) Indicate file name

User has to press the file name of new application rom file prepared for upgrading

(5) Start Download

Press OK to start download new application rom file. After download is finished, IP Phone will automatically reboot.

(6) Firmware Version

Show versions of all rom files and hardware.

Note: Download via LCD command can only upgrade new ***application*** rom file.

4. **Hardware Test**

   IP Phone 100 provides self-test for all functions buttons. Please follow the direction from LCD panel to operate and verify it.

5. **Reboot**

   It is necessary and important for user to reboot it after any configurations has been made to the IP Phone 100.

2. **User Line Number**

User has to identify at least one number for the IP Phone 100 to register to the GateKeeper. User can set up to 10 different numbers.

(1) Line Number 1
(2) Line Number 2
(3) Line Number 3
(4) Line Number 4
(5) Line Number 5
(6) Line Number 6
(7) Line Number 7
(8) Line Number 8
(9) Line Number 9
(10) Line Number 10

Note: User can set six zero “000000” on LCD to disable this number and the number after this one. Ex. Line Number 1-5 are configured, if user set Line 3 as “000000”, Line number 3-5 will be disabled.

3. **Ring Configuration**

(1) Ring Style Selection

There are three tone styles for IP Phone 100. Move the “~” symbol by press ← or → on the keypad to select the tone style preferred, then press OK to confirm it.

Choose Tone Style:
Low Middle High

(2) Ring Volume Control

User can adjust ring volume by by press ← or → on the keypad to decrease or increase volume.

4. Indicate Forward Type

There are two selections to activate or deactivate forward function. After selection please press **OK**

(1).Activate： choose under which situation to forward call to another endpoint. After selection please press **OK**, then enter LINE NUMBER of another endpoint prepared to forward to.

1. **Busy**
   When IP Phone 100 is in busy status, the incoming call will be directly forwarded to the assigned phone number.
2. **No response**
   When IP Phone 100 is continuing ringing around 10 seconds, the incoming call will be directly forwarded to the assigned phone number.
3. **Unconditional**
   It is included the above two types. Whether the IP Phone is in which status, it will be automatically forwarded to the assigned phone number.

(2).Deactivate： choose under which situation to deactivate forward function. After selection, please press **OK** , then user can see LINE NUMBER of the endpoint which is already configured to forward to, now press OK again.

Note: The number that user prepares to forward to is E.164 number which is registered on the GateKeeper.

5. Message Box

If there is an unanswered IP call, it will be kept in message box . **MESSAGE** LED will be flashing until user press **MESSAGE** to check miss call and re-press MESSAGE to return to main screen.

1. **New Call**：to see all incoming-call records in message box.
2. **History**：to see all records in message box.

6. Phone Address Book

1. Display

Display all name and telephone number recorded to the phone address book.

2. Add

Add and save name, telephone number and IP address of the phone address book.

3. Edit

Edit name, telephone number, and IP address of Phone book.

4. Delete

Delete the record in the phone address book.

Note: When key in IP address in Pbook table, please do not add 0 before IP address (ex.10.1.1.1 please do not key in 010.001.001.001).

Chapter 3 Advanced Configurations via Telnet

After initializing the IP Phone 100 IP Address setting (please refer to LCD Configuration: 1.Connect Configuration), user can enter into configuration mode via telnet. There are 18 commands listed below.

Note:
1.After user enter IP Phone configuration via telnet, please use login : ”root”, password : ”press enter” to enter command line.
2.Each command user must key-in with lower case, but contents of configurations such as h.323 alias or user name etc, user can set as capital case.
3.User who changes any configuration needs to do the **commit** command then **reboot** command.

1. [help] command

Type **help** or **man** or **?** to display all the command lists. The following figure is shown all commands of IP Phone 100.

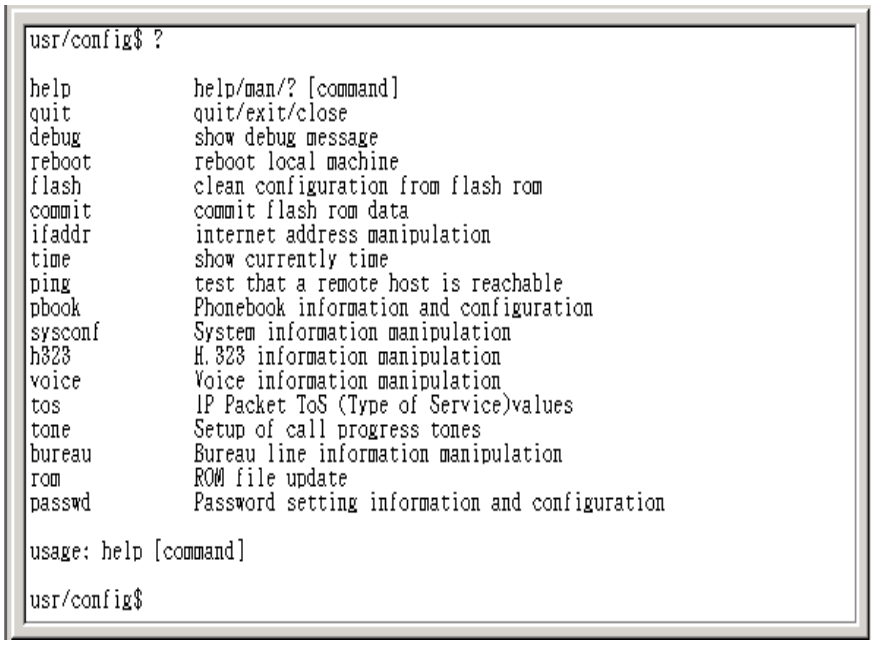

```
usr/config$ ?

help            help/man/? [command]
quit            quit/exit/close
debug           show debug message
reboot          reboot local machine
flash           clean configuration from flash rom
commit          commit flash rom data
ifaddr          internet address manipulation
time            show currently time
ping            test that a remote host is reachable
pbook           Phonebook information and configuration
sysconf         System information manipulation
h323            H.323 information manipulation
voice           Voice information manipulation
tos             IP Packet ToS (Type of Service)values
tone            Setup of call progress tones
bureau          Bureau line information manipulation
rom             ROM file update
passwd          Password setting information and configuration

usage: help [command]

usr/config$
```

2. [quit] command

Type **quit/exit/close** will logout IP Phone 100 and Telnet Program.

3. [reboot] command

After typing **commit** command, type **reboot** to restart the IP Phone 100.

Sometimes after user type reboot, on terminal screen will display :"Data modified, commit to flash rom?", which means IP Phone will record call history or not.(ex. REDIAL , outgoing and incoming call data)

4. [flash] command

This command will clean the configuration stored in the flash rom to default value and reboot the IP Phone 100.

Note: After user upgrade new software version, suggested to execute this command to make sure new software work well on IP Phone 100.

Note: To execute the command **flash –clean,** all configuration of IP Phone 100 stored on flash rom will be cleaned. It is authorized for the user whose login name is “root” only.

5. [commit] command

Save any changes after configuring the IP Phone 100.

quit quit/exit/close
debug show debug message
reboot reboot local machine
flash clean configuration from flash rom
commit commit flash rom data
ifaddr internet address manipulation
time show currently time
ping test that a remote host is reachable
sysconf System information manipulation
h323 H.323 information manipulation
voice Voice information manipulation
tone Setup of call progress tones
bureau Bureau line information manipulation
rom ROM file update
usage: help [command]
usr/config$ commit
This may take a few seconds, please wait....
Commit to flash memory ok!
usr/config$ _

6. [ifaddr] command

Configure and display the IP Phone 100 IP information.

1. **-ip, -mask, -gate**: Set IP Phone 100 IP Address, subnet mask and default gateway respectively.
2. **-dhcp**: When DHCP function enables (**ifaddr –dhcp 1**), IP Phone 100 will automatically search DHCP server after execute the **commit** and **reboot** command.
   Note: After IP Phone catch a dynamic IP address form DHCP server, user can see this IP address on LCD connect configuration.
3. **-sntp**: When sntp server is available, enable IP Phone 100 SNTP function and point to sntp server IP address. **(ifaddr –sntp 1 "xxx.xxx.xxx.xxx**")
4. **-dns**:User can set Domain Name Server IP address. Once IP Phone can connect with DNS server, user can specify URL address instead of IP address for gatekeeper and phone book IP address. (please refer to **12.[h323] command** and **3.9[pbook] command**)
5. **–timezone**: User can set different time zone according to the location IP Phone is. For example, in Taiwan the time zone should be set as 8,which means GMT+8. (GMT-8: **ifaddr –timezone -8**)
6. **-ipsharing**: If IP Phone 100 is behind a IP-sharing , user can enable IP sharing function and specify public IP address.(**ifaddr –ipsharing 0/1 "public IP address of IP sharing" ,** 0 for disable and 1 for enable)
7. **-cmcenter:** Set management center IP address. IF user specifies management center IP address, IP Phone will send information to management center, let user can easily configure via management center interface. (**ifaddr –cmcenter "IP address of management center"** ; **ifaddr –cmcenter x** to disable this function)

Note: management center is optional software to help user can easily configure our products, please contact your reseller to know more about it.

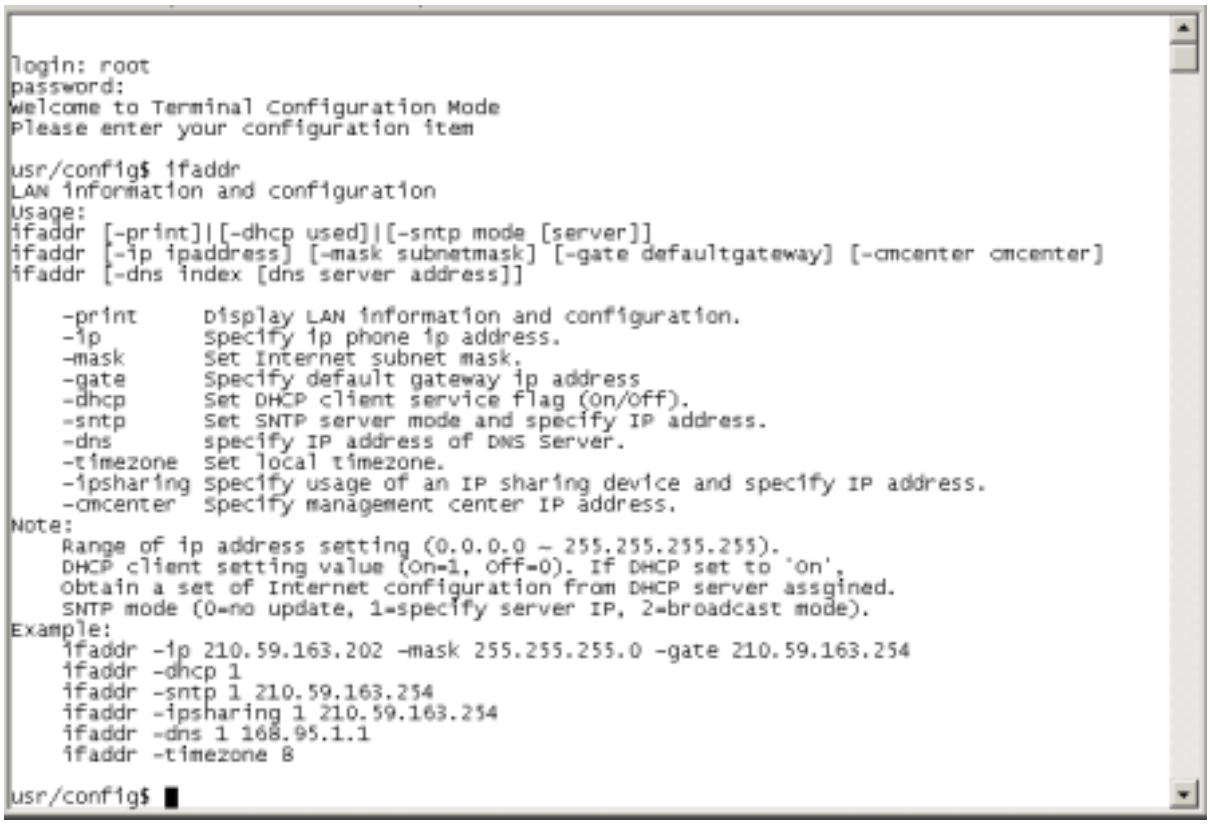
login: root
password:
Welcome to Terminal Configuration Mode
Please enter your configuration item
usr/config$ ifaddr
LAN information and configuration
Usage:
ifaddr [-print]|[-dhcp used]|[-sntp mode [server]]
ifaddr [-ip ipaddress] [-mask subnetmask] [-gate defaultgateway] [-cmcenter cmcenter]
ifaddr [-dns index [dns server address]]
-print Display LAN information and configuration.
-ip Specify ip phone ip address.
-mask Set Internet subnet mask.
-gate Specify default gateway ip address
-dhcp Set DHCP client service flag (On/Off).
-sntp Set SNTP server mode and specify IP address.
-dns specify IP address of DNS Server.
-timezone set local timezone.
-ipsharing Specify usage of an IP sharing device and specify IP address.
-cmcenter Specify management center IP address.
Note:
Range of ip address setting (0.0.0.0 - 255.255.255.255).
DHCP client setting value (On=1, Off=0). If DHCP set to 'On',
Obtain a set of Internet configuration from DHCP server assgined.
SNTP mode (0=no update, 1=specify server IP, 2=broadcast mode).
Example:
ifaddr -ip 210.59.163.202 -mask 255.255.255.0 -gate 210.59.163.254
ifaddr -dhcp 1
ifaddr -sntp 1 210.59.163.254
ifaddr -ipsharing 1 210.59.163.254
ifaddr -dns 1 168.95.1.1
ifaddr -timezone 8
usr/config$

7. [time] command

When sntp server is established as well as the sntp function of IP Phone 100 is enabled, type **time** command should show the current time what is retrieved from the assigned sntp server.

Note: Please refer to the Chapter 4.6 [ifaddr] command to configure sntp server..

8. [ping] command

Command **ping** can test which the IP address is reachable or not.

Usage: ping “xxx.xxx.xxx.xxx(IP address)”

The message will display packets transmitting condition or no answer from the IP address.

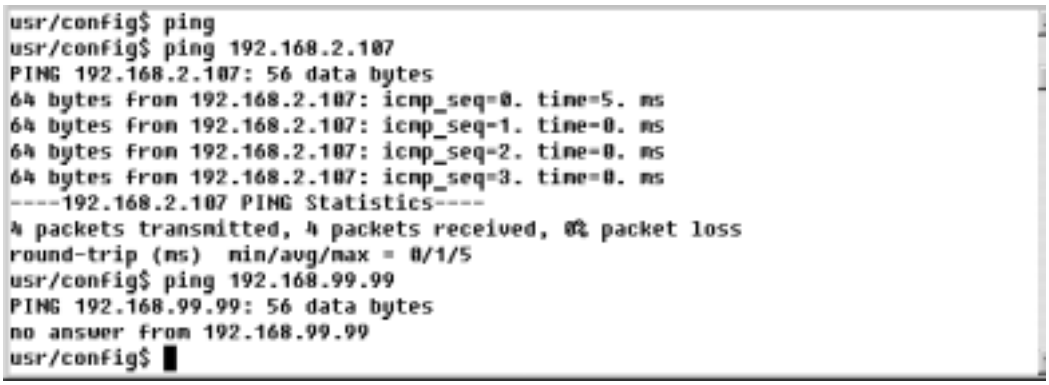
usr/config$ ping
usr/config$ ping 192.168.2.107
PING 192.168.2.107: 56 data bytes
64 bytes from 192.168.2.107: icmp_seq=0. time=5. ms
64 bytes from 192.168.2.107: icmp_seq=1. time=0. ms
64 bytes from 192.168.2.107: icmp_seq=2. time=0. ms
64 bytes from 192.168.2.107: icmp_seq=3. time=0. ms
----192.168.2.107 PING Statistics----
4 packets transmitted, 4 packets received, 0% packet loss
round-trip (ms) min/avg/max = 0/1/5
usr/config$ ping 192.168.99.99
PING 192.168.99.99: 56 data bytes
no answer from 192.168.99.99
usr/config$

9. [pbook] command

The command is for Peer-to-Peer Mode use only. Therefore, our VoIP products such as IP Phone 100 that support Peer-to-Peer Mode are also available to be addressed on the IP Phone 100 phone book.

1. **-print**: display phone book data. User can print all data in phone book by command (**pbook –print**). Furthermore, user can also print only a section of data by indicate parameter 'start_record' and 'end_record' (**pbook –print "start prefix" "end prefix"**). If parameter 'end_record' is omitted, only record 'start_record' will be display (**pbook –print "start prefix")**.
2. **-add**: add a new record in phone book table by give a name and e164 number for the Gateway / Terminal IP address .
   (**pbook –add name "X" ip "xxx.xxx.xxx.xxx" e164 "X"**)
   User can set IP or URL address(Domain Name Server must be configured. Please refer to **6. [ifaddr] command**)
3. **-search**: search any record such as ip address, name and e164 addressed on the phone book.
4. **-delete**: delete a record with index listed in phone book table. (**pbook –delete "index number"**)
5. **-insert**: insert an record in specified index of phone book.
6. **-modify**: modify any record that has addressed to index number. The name, IP address and e164 number should be modified together in one **modify** command.
   (**pbook –modify "index" name "X" ip "xxx.xxx.xxx.xxx" e164 "X"**)

Note: Please dial "#" after dial e.164 of pbook .

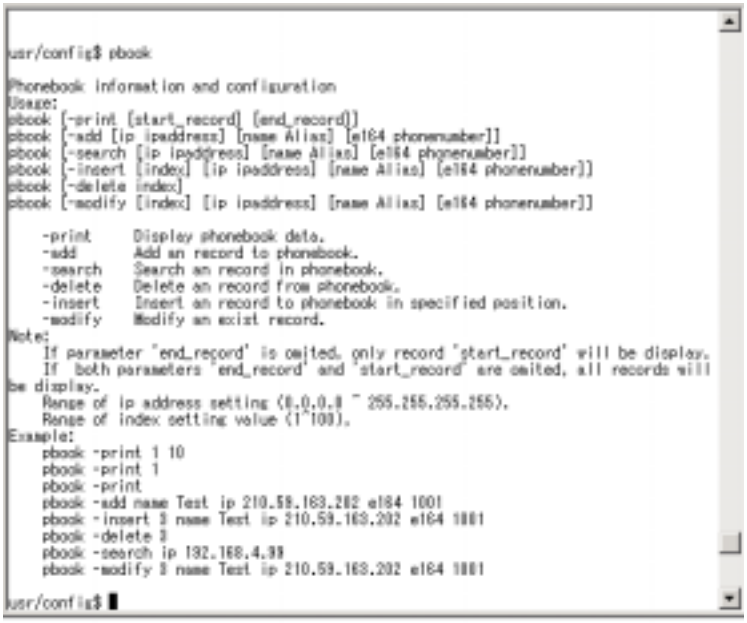
usr/config$ pbook
Phonebook information and configuration
Usage:
pbook [-print [start_record] [end_record]]
pbook [-add [ip ipaddress] [name Alias] [e164 phonenumber]]
pbook [-search [ip ipaddress] [name Alias] [e164 phonenumber]]
pbook [-insert [index] [ip ipaddress] [name Alias] [e164 phonenumber]]
pbook [-delete index]
pbook [-modify [index] [ip ipaddress] [name Alias] [e164 phonenumber]]
-print Display phonebook data.
-add Add an record to phonebook.
-search Search an record in phonebook.
-delete Delete an record from phonebook.
-insert Insert an record to phonebook in specified position.
-modify Modify an exist record.
Note:
If parameter 'end_record' is omited, only record 'start_record' will be display.
If both parameters 'end_record' and 'start_record' are omited, all records will be display.
Range of ip address setting (0.0.0.0 ~ 255.255.255.255).
Range of index setting value (1~100).
Example:
pbook -print 1 10
pbook -print 1
pbook -print
pbook -add name Test ip 210.59.163.202 e164 1001
pbook -insert 3 name Test ip 210.59.163.202 e164 1001
pbook -delete 3
pbook -search ip 192.168.4.99
pbook -modify 3 name Test ip 210.59.163.202 e164 1001
usr/config$

10.[pppoe] command

Note: ***Firmware of IP Phone are separate into normal version and PPPoE version.***
1. This command can only see in PPPoE version, in normal version PPPoE function is not implemented.
2. In PPPoE version has no TOS command.

1. -print: display system overall information and configuration. IF IP Phone has already connected to PPPoE server, user can see IP address and related information with this command.
2. -dev: to enable or disable PPPoE function.(**pppoe –dev 0/1**)
3. –open: to open PPPoE connection(If IP Phone is not in PPPoE connection, user can try to connect with **pppoe -open**)
4. –close: to close PPPoE connection(If IP Phone is in PPPoE connection, user can disconnect with **pppoe -close**)
5. –id: to set PPPoE connection user name
6. –pwd: to set PPPoE connection password
7. –reboot: If user enable this function, after PPPoE being disconnected, IP Phone will automatically reboot to re-connect, and after reboot, if IP Phone still can’t get contact with server, IP Phone will keep trying to connect. On the other hand, if user disable this function, IP Phone won’t reboot and keep trying to connect.(**pppoe –reboot 0/1**)

```
usr/config$ pppoe
PPPoE device information and configuration
Usage:
pppoe [-print]|[-open]|[-close]
pppoe [-dev on/off][-id username][-pwd password]

    -print      Display PPPoE device information.
    -dev        Enable(=1) or Disable(=0) device.
    -open       Open PPPoE connection.
    -close      Disconnect PPPoE connection.
    -id         Connection user name.
    -pwd        Connection password.
    -reboot     Reboot after remote host disconnection.

usr/config$
```

11.[sysconf] command

This command displays the system information and configuration.

1. **-print**: display system overall information and configuration.
2. **-plan**: It is for setting dial numbering plan. While e164 number is three digits, the plan should be set as 3 or 0. The plan 0 is for any positive digits use.
3. **–callalive**: Enable or disable auto-disconnection after 10 seconds not receiving packets from remote party**(sysconf –callalive 0/1, 0 for disable and 1 for enable)**
4. **-keypad**:set DTMF type .User can select DTMF type IP Phone receive and transmit.(**sysconf –keypad 0/1/2/3 , 0 for inband ,1 for H.245 alphanumeric, 2 for H.245 signal type, 3 for Q.931 user info, 4 for RFC2833.**)
5. **-idto**:set the duration(in second) of two pressed digits in dial mode as timed out. If after the duration user hasn't pressed next number, IP Phone will dial out all number pressed.
6. **-eod**:select end of dialing key, e.g set end of dial key as **OK** button , after finished pressing dialing number then press **OK** will dial out. (**sysconf –eod 0/1/2/3** , 0 for no end of dial key , 1 for "OK" button , 2 for "#" button , 3 for "＊" button)
7. **-h450**:Enable or disable H.450 related features, which include transfer, hold and forward.

```
usr/config$ sysconf
System information and configuration
Usage:
sysconf [-plan digits] [-callalive flag] [-h450 flag] [-keypad type] [-idto time
] [-eod type]
sysconf -print

    -print      Display system overall information and configuration.
    -plan       Number of digits for dial plan. ( No or positive
                number 1 ~ 24. )
    -callalive  Enable or disable auto-disconnection after 10 seconds
                not receiving packets from remote party.
    -keypad     Select DTMF type. ( 0:INBAND, 1:H245ALPHANUMARIC,
                2:H245SIGNALTYPE, 3:Q931USERINFO, 4:RFC2833 )
    -idto       The duration of two pressed digits in dial mode
    -eod        Digit type of end of dialing. ( 0:No end of dialing,
                1:[OK] button, 2:[#] button, 3:[*] button. )
    -h450       Enable or disable H.450 related features.
Example:
    sysconf -plan 4 -callalive 0 -h450 1 -keypad 2 -idto 5 -eod 0

usr/config$
```

12. [h323] command

1. **–print**: display H.323 stack information and configuration.
2. **–mode**: configure IP Phone 100 as GateKeeper or Peer-to-Peer Mode.
   Usage:**h323 –mode 0/1**(0 for GateKeeper mode ,1 for Peer-to-Peer mode)
3. **–gk**: set Main GateKeeper IP address**(h323 –gk "xxx.xxx.xxx.xxx")** or URL address(Domain Name Server must be configured. Please refer to **6. [ifaddr] command**) . User can set IP as 255.255.255.255 and let IP Phone auto discovery for GateKeeper. Please notice in this case, user must enable gatekeeper discovery function.Please refer to 5.-**gkname** and 10.-**gkdis**.
4. **–dfgw**:to set IP address of default gateway, this function is the same as Microsoft NetMeeting.
   A. To implement this feature both calling and called endpoints must be under peer-to-peer mode.
   B. If the called party is FXO products, such as TIG-404, which Have to set **sysconf –2nddial 0** to make one-stage dialing.
      - Dial remote PSTN number under default gateway, IP Phone will automatically dial to default gateway, then default gateway will dial this number to PSTN side.
      - For example, user wants to dial to ext.888 under TIG-404, user only have to dial 888 from IP Phone.

   C. If called party is FXS products such as TIG-404S : user can dial line number of TIG-404S from IP Phone.
      - For example ,user wants to dial to TIG-400, the configuration of 3502 is **h323 –line1 101 –line2 102**, user can press 101 or 102 dialing to line1 or line2 of TIG-400.
5. **–algk**:set IP address or URL address(Domain Name Server must be configured. Please refer to **6. [ifaddr] command**) of alternative GateKeeper. If IP Phone tries to register to main GateKeeper for 10 times but still fail, IP Phone will try to register to alternative GateKeeper.
6. –**gkname**:set GateKeeper name for GateKeeper discovery. When IP Phone send out GateKeeper discovery message will search GateKeeper with this GateKeeper name.(please refer to 10.-**gkdis**)
7. **–e164**: identify one number for the IP Phone 100 to register to the GateKeeper **(h323 –e164 "X").**
8. **–e164-x**:user can assign other 10 telephone numbers .For example, 10 users share the same IP Phone, they can assign phone numbers as 100, 200, 300….(**h323 –e164 100 –e164-1 200 –e164-2 300….**) User can disable one number and the number after this one. Ex. from set 1-5 is configured, if user set the third number as "x", from third to fifth number will be

disabled at the mean time. (ex. **h323 –e164-2 x**)

9. **–alias**: identify ID for the IP Phone 100 to register to the GateKeeper **(h323 –alias "X").**.The default alias is related to MAC address of IP Phone, so each IP Phone has different alias.
10. **–tokenpwd**: To set RRQ/ARQ authentication token password.(**h323 –tokenpwd "password" ; h323 –tokenpwd x** to disable this function**)**
    (A) LCD menu password: User can enter LCD system configuration by key in this password and default value is lowercase "x." (press TRANSFER to switch lowercase and uppercase).
    (B) H.235 security: To set RRQ/ARQ authentication token password. If IP Phone wants to register to a GateKeeper, which implement H.235 security token feature, IP Phone has to set a RRQ/ARQ authentication token password, which is provided by GateKeeper manager. IP Phone can't work normally with this GateKeeper unless Token Password is set.
11. **–gkdis**: set auto discovery function on or off. If this function is enabled and IP address of GateKeeper is set as 255.255.255.255, IP Phone will multicast to search a GateKeeper on network with configured GateKeeper name(please refer to 6.-**gkname**); if IP address of GateKeeper is set, before IP Phone register to the assigned GateKeeper, it will send out GRQ(GateKeeper Request) message with configured GateKeeper name to GateKeeper first.
12. **–rtp**: assign RTP port number(1024-65535)
13. **–ttl**:set RAS TTL time(0-3600 second)
14. **–gkfind**: assign GateKeeper finding port number(1024-65535)
15. **–ras**: assign GateKeeper RAS port(1024-65535)
16. **–range**: assign dynamically allocated port range(1500-65535)
17. **–respto**: set max waiting time for first response to a new call. After dial phone No. without getting response in max waiting time, user will hear busy tone.(1-200 seconds)
18. **–connto**: set max waiting time for call establishment after receiving first response of a new call (1-20000 seconds).

Note: 1.Items from 9-16 are for advanced user only.
2.In Peer-to-Peer mode, **h323 –print** will only display e164, alias, mode , RTP port, and allocated port range.
3.In P2P mode, please dial "#" after press IP address (ex.10.1.1.1 please dial 10*1*1*1#) or e.164 of Phone book (Please refer to chapter 3.9 Pbook command).

```
usr/config$ h323
H.323 stack information and configuration
Usage:
h323 [-mode gkmode]
h323 [-gk ipaddress] [-algk ipaddress] [-gkdis used] [-e164 number] [-e164-x number]
     [-alias h323id] [-tokenpwd password]
     [-rtp port] [-ttl time] [-gkfind port] [-ras port]
     [-range [start num1] [end num2]] [-respto t1] [-connto t2] [-dfgw IP]
h323 -print

    -print     Display H.323 stack information and configuration.
    -mode      Configure as Gatekeeper mode or Non-Gatekeeper mode.
    -gk        Gatekeeper ip address. (0.0.0.0 ~ 255.255.255.255)
    -dfgw      Default Gateway IP Address. (0.0.0.0 ~ 255.255.255.255)
    -algk      Second Gatekeeper ip address. (0.0.0.0 ~ 255.255.255.255)
    -gkname    Gatekeeper ID
    -e164      IP side registered number.
    -e164-x    IP side registered number.(x:1~9)
    -alias     IP side registered H323 ID.
    -tokenpwd  RRQ/ARQ authentication token password.
    -gkdis     Gatekeeper auto discovery (multicast, On=1, off=0).
    -rtp       RTP port number (1024~65532).
    -ttl       RAS TTL time (0~3600 second).
    -gkfind    Gatekeeper finding port (1024~65535).
    -ras       Gatekeeper RAS port (1024~65535).
    -range     Dynamically allocated port range (1024~65535).
    -respto    Max waiting time for 1st response to a new call (1~200).
    -connto    Max waiting time for call establishment after receiving 1st
               response of a new call (1~20000).
Note:
Options -gk -e164 -alias -gkdis -ttl -gkfind -ras are ignored when
    RAS mode is configured as Non-GK mode.
Example:
    h323 -gk 210.59.163.171 -e164 101 -alias LanPhone101
    h323 -mode 1

usr/config$
```

13. [voice] command

The voice command is associated with the voice codec setting information.

1.**-print**: display voice codec information and configuration.
There are five voice codecs included in IP Phone 100:G.723.1, G.711u, G.711A, G.729a, G.729.

2. **-send**: three voice packet size can be configured as 20 ms, 40 ms or 60 ms.(only 30 and 60 ms for G..723)

3. **-priority**: set codecs priority in order. Please notice that user can set from 1 to 5 codecs as their need, for example, **voice –priority g723** or **voice –priority g723 711a g711u g729a g729** means IP Phone can support only one codec or five codecs.

4. **-volume**: There are three types can be adjustable, voice volume, input gain and DTMF volume.

5. **-nscng**: enable or disable sound compression and comfort noise generation. It is only for codec G.723.1. (0 for off ,1 for on)

6. **-echo**: echo canceller can be made to each specified port. The default value is on to 6 ports.

7.**-mindelay**:set minimum delay of jitter buffer(0~150)

8.**-maxdealy**:set maximum delay of jitter buffer(0~150)

Note: It is for advanced administrator use only. Please ask your distributor before changing any settings of this command.

```
Voice codec setting information and configuration
Usage:
voice [-send [G723 ms] [G711A ms] [G711U ms] [G729A ms] [G729 ms] ]
      [-volume [voice level] [input level] [dtmf level]]
      [-nscng G723 used] [-echo used] [-mindelay/maxdelay used]
voice -print
voice -priority [G723] [G711A] [G711U] [G729A] [G729]

    -print     Display voice codec information and configuration.
    -send      Specify sending packet size.
               G.723  (30/60 ms)
               G.711A (20/40/60 ms)
               G.711U (20/40/60 ms)
               G.729A (20/40/60 ms)
               G.729  (20/40/60 ms)
    -priority  Priority preference of installed codecs.
               G.723
               G.711A
               G.711U
               G.729A
               G.729
    -volume    Specify the following levels:
               voice volume (0~40, default: 30),
               input gain (0~63, default: 32),
               dtmf  volume (0~31, default: 27),
    -nscng     Silence suppression and CNG. (G.723.1 only, On=1, Off=0).
    -echo      Setting of echo canceller. (On=1, Off=0, per port basis).
    -mindelay  Setting of jitter buffer min delay. (0~150, default: 100).
    -maxdelay  Setting of jitter buffer max delay. (0~150, default: 150).
Example:
    voice -send g723 60 g711a 60 g711u 60 g729a 60 g729 60
    voice -volume voice 20 input 32 dtmf 27
    voice -echo 1 1
```

14. [tos] command

This command is for setting IP packet TOS values to determine IP Packets priority on network.

1. **-print** : display current TOS values configurations.
2. **-rtptype** : configure TOS type of RTP packets from 0 to 7
3. **-rtcptype** : configure TOS type of RTCP packets from 0 to 7
4. **-rtpdelay** : configure RTP packets as normal delay or low delay
5. **-rtcpdelay** : configure RTCP packets as normal delay or low delay
6. **-rtpthruput** : configure RTP packets as normal throughput or high throughput
7. **-rtcpthruput** : configure RTCP packets as normal throughput or high throughput
8. **-rtpreliab** : configure RTP packets as normal reliability or high reliability
9. **-rtcpreliab** : configure RTCP packets as normal reliability or high reliability

Note: This command won't be functional until network environment can be capable with TOS function.

```
usr/config$ tos
IP Packet TOS(type of service)information and configuration
Usage:
tos [-rtptype precedence]
    [-rtpdelay mode]
    [-rtpthruput mode]
    [-rtpreliab mode]
tos -print
    [-rtptype]|[-rtcptype]          0 routine.
                                    1 priority.
                                    2 immediate.
                                    3 flash.
                                    4 flash override.
                                    5 critic.
                                    6 internet control.
                                    7 network control.
    [-rtpdelay]|[-rtcpdelay]        0 normal delay.
                                    1 low delay.
    [-rtpthruput]|[-rtcpthruput]  0 normal throughput.
                                    1 high   throughput.
    [-rtpreliab]|[-rtcpreliab]     0 normal reliability.
                                    1 high   reliability.
Example:
    tos -rtptype 7 -rtpdelay 0 -rtpthruput 0 -rtpreliab 0

usr/config$
```

15. [tone] command

IP Phone 100 is configurable of busy tone, reorder tone, ring tone and dial tone. However, only ring tone and dial tone is functional for now, busy tone and reorder tone are reserved for future feature.

Usage：tone –ringtone1/ringtione2/dialtone “low frequency” “high frequency” “low frequency level” “high frequency level” “low frequency on time” “low frequency off time” “high on time” “high frequency off time”; user must key in 8 sets of number to finish this configuration. If it is single-frequency tone, please set high frequency and related items as 0. Furthermore, unit of on/off time is 1/100 second, and suggest to keep level as default value (8).User can also increase the value of level to increase the volume.

```
ping            test that a remote host is reachable
sysconf         System information manipulation
h323            H.323 information manipulation
voice           Voice information manipulation
tone            Setup of call progress tones
bureau          Bureau line information manipulation
rom             ROM file update

usage: help [command]

usr/config$ tone

Setup of call progress tones
Usage:
tone -toneX LowFreq HighFreq LowFreqLevel HighFreqLevel TOn1 TOff1 TOn2 TOff2
tone -print
Note:
    toneX has the following possibility:
    busy1 busy2 reorder1 reorder2 ringtone1 ringtone2 dialtone
Example:
    tone -busy1 400 0 8 0 50 50 0 0
    tone -dialtone 400 0 19 0 25 25 0 0

usr/config$ _
```

16. [support] command

1.**-print** : display current SUPPORT values configurations.

2.**-fstart**: enable or disable fast start (**support –fstart 0/1** , 0 for disable and 1 for enable.)

Note: When fast start function is enabled, if user wants to send DTMF message after connection, IP Phone will send out Q.931 message. (Please refer to **11.sysconf –keypad** command, which can only set keypad as q.931 message at this time)

3.**-tunnel**: enable or disable H.245 tunnel function.(**support –tunnel 0/1** , 0 for disable and 1 for enable)

4.**-h245fs**:set if open H.245 separate channel after fast start or not. (**support –h245fs 0/1** , 0 for open and 1 for not.)

```
usr/config$ support
Special Voice function support manipulation
Usage:
support [-fstart enable] [-tunnel enable] [-h245fs enable]
support -print

    -fstart    Fast start enabled/disabled.
    -tunnel    H245 Tunneling enabled/disabled.
    -h245fs    H245 seperate channel after faststart.
Example:
    support  -fstart 1
    support  -tunnel 0
    support  -h245fs 1
usr/config$
```

17. [bureau] command

Type **bureau** can display commands below.

1. **-print**: display bureau line information and configuration.

2. **-hold**: set hold tone generation on or off. If other terminals support H.450 hold function, and execute hold function when connecting with IP Phone 100, user will hear hold tone from IP Phone 100. (0 for off ,1 for on)

```
usr/config$ bureau
Bureau line setting information and configuration
Usage:
bureau [-hold used]
bureau -print

    -print     Display Bureau line information and configuration.
    -hold      Specify the hold tone generation (using PCM file). (On/Off)
               Setting value (On=1, Off=0).
Example:
    bureau -hold 1

usr/config$
```

18.[rom] command

1. **-print**: show versions of all rom files.
2. **-app**,**-boot**, **-dsptest**, **-dspcore**, **-dspapp**, **-rbpcm** and **-htpcm**: upgrade main boot code, main application code, DSP testing code, DSP kernel code, DSP application code, Ring Back Tone PCM file and Hold Tone .
3. **-boot2m**:to upgrade 2mb rom file, which includes all firmware file mentioned in item 2.

Note:

1. After 2mb file download is finished, all configurations might change to default value, user has to configure again.
2. MAC address might change to default value also, please **MUST** use command ***setmac***:
   Usage: key in command ***setmac***
   key in MAC address (which you can see on a label attached at the bottom of IP Phone)with format:
   00
   01
   a8
   00
   0x
   xx
   (It means to press enter each time after key in two characters.)

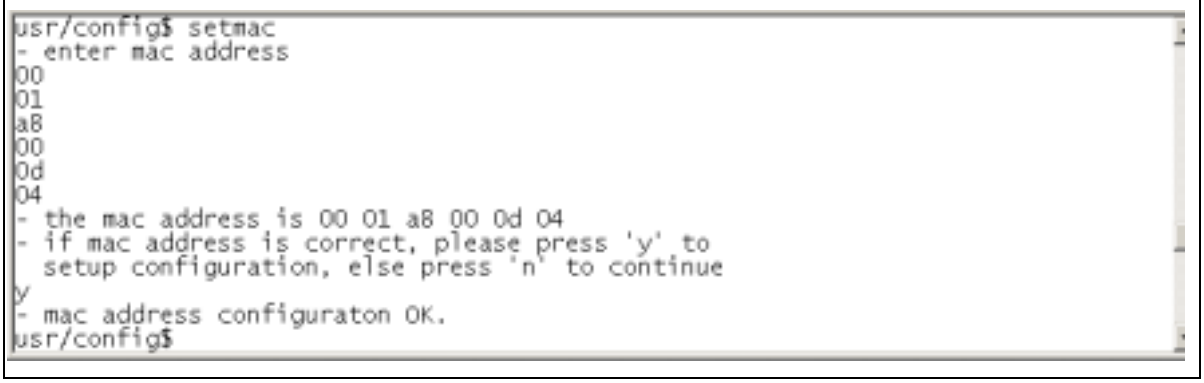

4. **-s**: it is necessary to prepare TFTP/FTP server IP address for upgrading firmware rom file.
5. **-f**: the file name prepared for upgrading is necessary as well.
6. **–server**: specify TFTP/FTP server IP address. It is corresponding to LCD configuration -firmware upgrade-Set file Server IP.
7. **–method**: specify download method to be TFTP or FTP(0 for TFTP.1 for FTP)
8. **–ftp**: specify user name and password for FTP download method

For example: User prepares to upgrade the latest app rom file – wtlp.103c, the TFTP server is 192.168.4.101.

rom –app –s 192.168.1.1 –f lp.100(If –server is specified , can just type **rom –app –f lp.100**)

```
usr/config$ rom
ROM files updating commands
Usage:
rom [-print] [-boot] [-app] [-dsptest] [-dspcore] [-dspapp] [-rbpcm] [-htpcm]
     -s TFTP/FTP server ip -f filename
rom [-method mode] [-ftp username password] [-server serverIP]
rom -print
    -print     show versions of rom files. (optional)
    -boot      update main boot code(optional, only root user has authority.)
    -boot2m    update 2M code(optional, only root user has authority.)
    -app       update main application code(optional)
    -dsptest   update DSP testing code(optional)
    -dspcore   update DSP kernel code(optional)
    -dspapp    update DSP application code(optional)
    -rbpcm     update RingBack Tone PCM file(optional)
    -htpcm     update Hold Tone PCM file(optional)
    -s         IP address of TFTP/FTP server (mandatory)
    -f         file name(mandatory)
    -server    TFTP/FTP server IP address (store server IP in flash)
    -method    download via TFTP/FTP (TFTP: mode=0, FTP: mode=1)
    -ftp       specify username and password for FTP
Note:
This command can run select one option in 'app', 'dsptest', 'dspcore',
 'dspapp', and 'rbpcm'.
Note:
    Once downloading server IP address is set via -server option,
    user can omit the -s option the next time when downloading.
    We keep -s option for backward compatibility.
Example:
    rom -method 1
    rom -ftp vwusr vwusr
    rom -server 192.168.4.101
    rom -app -f app.bin
```

Command **rom –print** can show current version installed in IP Phone 100.

```
usr/config$ rom -print

Download Method  :  TFTP
 Server Address  :  192.168.2.107

   Hardware Ver. :  4.0
       Boot Rom  :  nblp-boot.102a
Application Rom  :  wtlp.108f
        DSP App  :  48302ce3.127
     DSP Kernel  :  48302ck.127
  DSP Test Code  :  483cbit.bin
  Ringback Tone  :  wg-ringbacktone.100
      Hold Tone  :  wg-holdtone.101
  Ringing Tone1  :  ringlow.bin
  Ringing Tone2  :  ringmid.bin
  Ringing Tone3  :  ringhi.bin

usr/config$
```

19.[passwd] command

For security protection, user has to input the password before entering ***application user/config mode***. Two configurations of login name/password are supported by the system.

1. **–set**: set password of “root” users or “administrator” users. (**password –set root/administrator “password”**)
2.**–clean**: clean up password restored before, and user can login :”root/adminstrator”, password:”press enter”.

User who requests authorization to execute **all** configuration commands needs to login with “root”. If a user login with “administrator”, two commands are not functional:

1. **password –set root**: set password of login : “root”.
2. **passwd –clean**: clean up password restored before, and user can login :”root/adminstrator”, password: ”press enter”.
3. **flash –clean:** only “root” users can clean all configurations stored in flash.
4. **rom –boot** :only “root” users can upgrade IP Phone boot rom version.
5. **rom –boot2m** : only “root” users can upgrade IP Phone 2mb firmware.

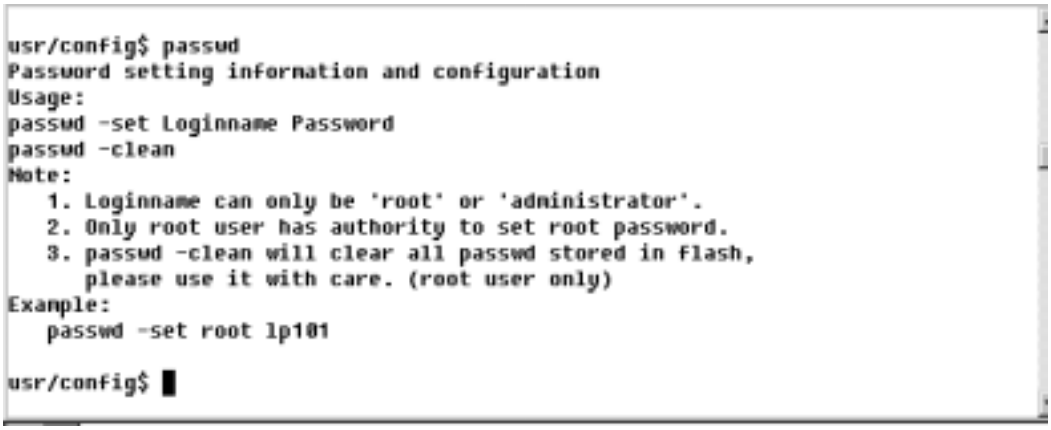
usr/config$ passwd
Password setting information and configuration
Usage:
passwd -set Loginname Password
passwd -clean
Note:
1. Loginname can only be 'root' or 'administrator'.
2. Only root user has authority to set root password.
3. passwd -clean will clear all passwd stored in flash,
please use it with care. (root user only)
Example:
passwd -set root lp101
usr/config$

Chapter 4 Web Configuration

The initial version for HTTPD web management interface provides user to configure easily rather than command operating method through RS-232 / TELNET.

The configuration function and step is similar with the way through command line. Basically this version is not the finalized version for web interface. Initially please refer to the manual for more information. Below provide a simple user guide for user to configure via web interface. Next version for HTTPD web management will not like the command format, but friendly interface.

Step 1. Browse the IP Address predefined via RS-232

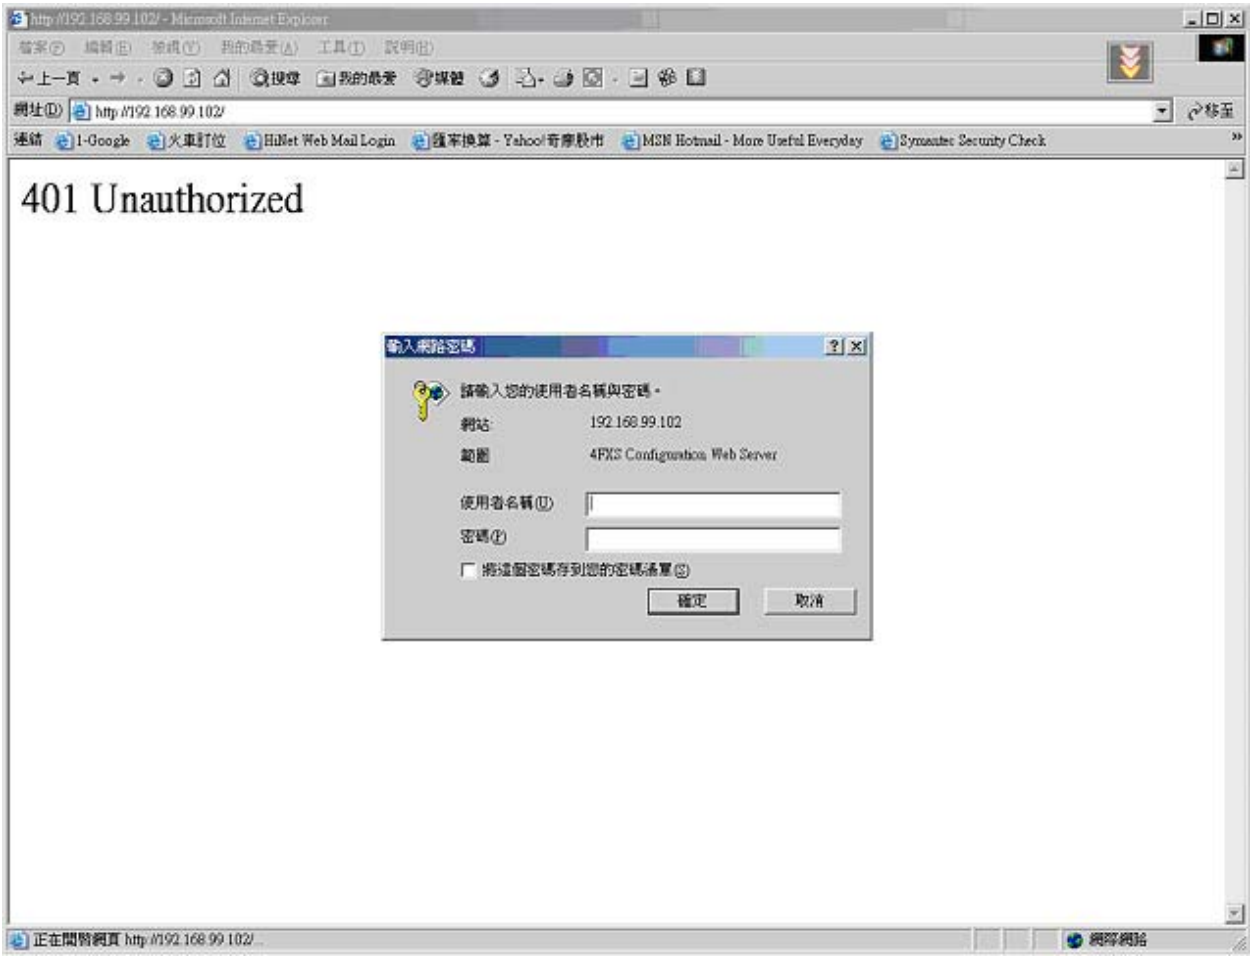

Step 2. Input the login name and password

- Login name: root / administrator
- Password: None (just press Enter in default value)

Step 3. The web interface main screen

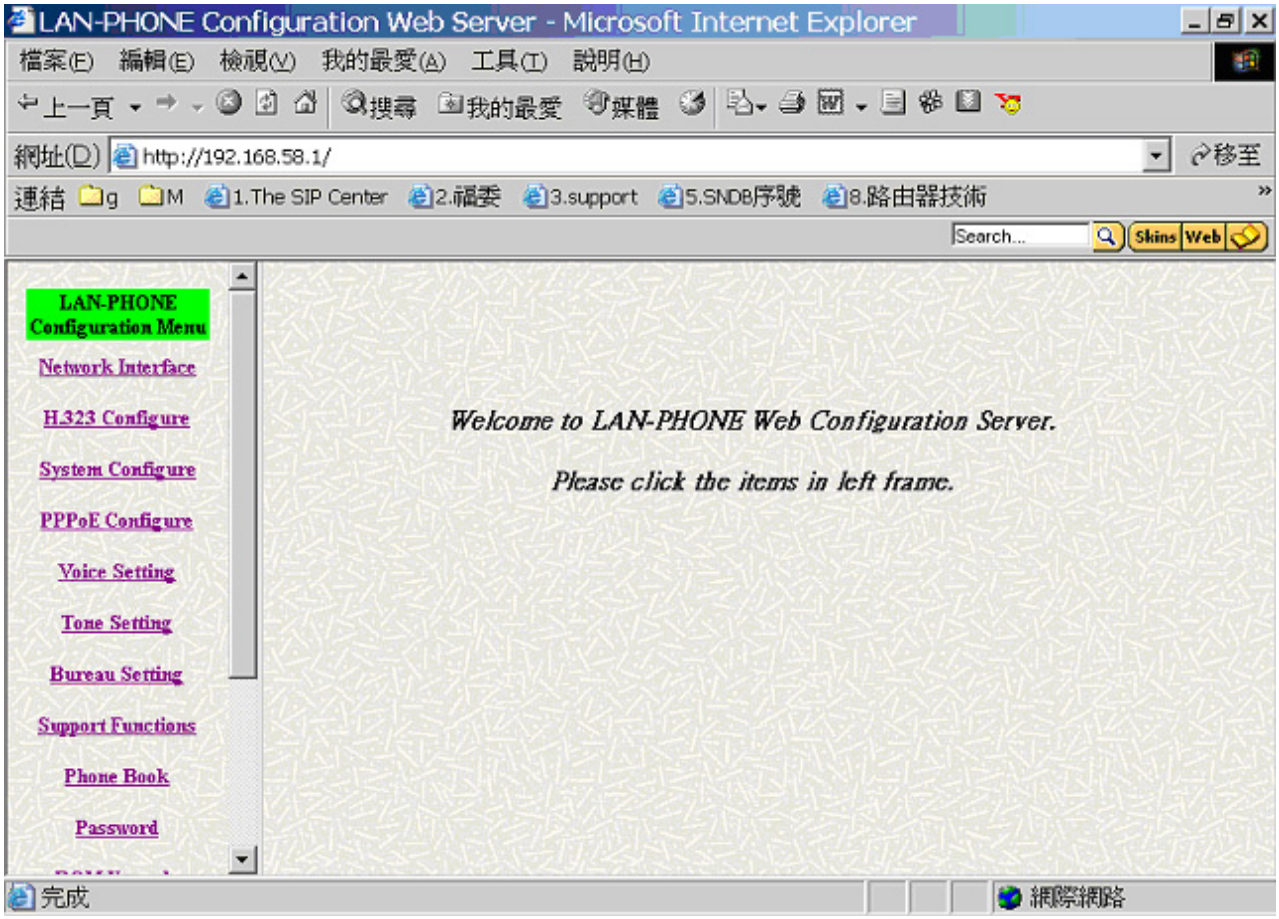

Step 4. Start configure

Most of all commands displayed in console / telnet are transfer to web interface. The most important commands are Network Interface, H323 Information, Commit Data and Reboot System. The method is as the same as command mode.

1.Network Interface

Please refer to chapter **3.6 [ifaddr] command.**

- DHCP: Enable / Disable to DHCP mode
- IP Address: Set IP Address
- Subnet Mask: Set the Subnet Mask
- Default gateway: Set Default routing gateway
- Domain Name Server: Set Domain Name Server IP address
- SNTP: Enable / Disable the Simple Network Time Protocol
- SNTP Server Address: Set SNTP Server Address
- GMT: Set time zone for SNTP Server time
- IP Sharing: Enable it if behind IP Sharing router
- IP Sharing Server Address: Set WAN IP Address of IP Sharing Server router if it is a fixed one.
- Management Center IP Address: Set Management Center Address

Please be noted:

If the WAN IP Address of IP Sharing Server router is not a fixed one, it is not necessary to input any values.

If behind the dynamic WAN IP Address situation please configure as GK mode and select TGK-103 Call Manager as proxy server.

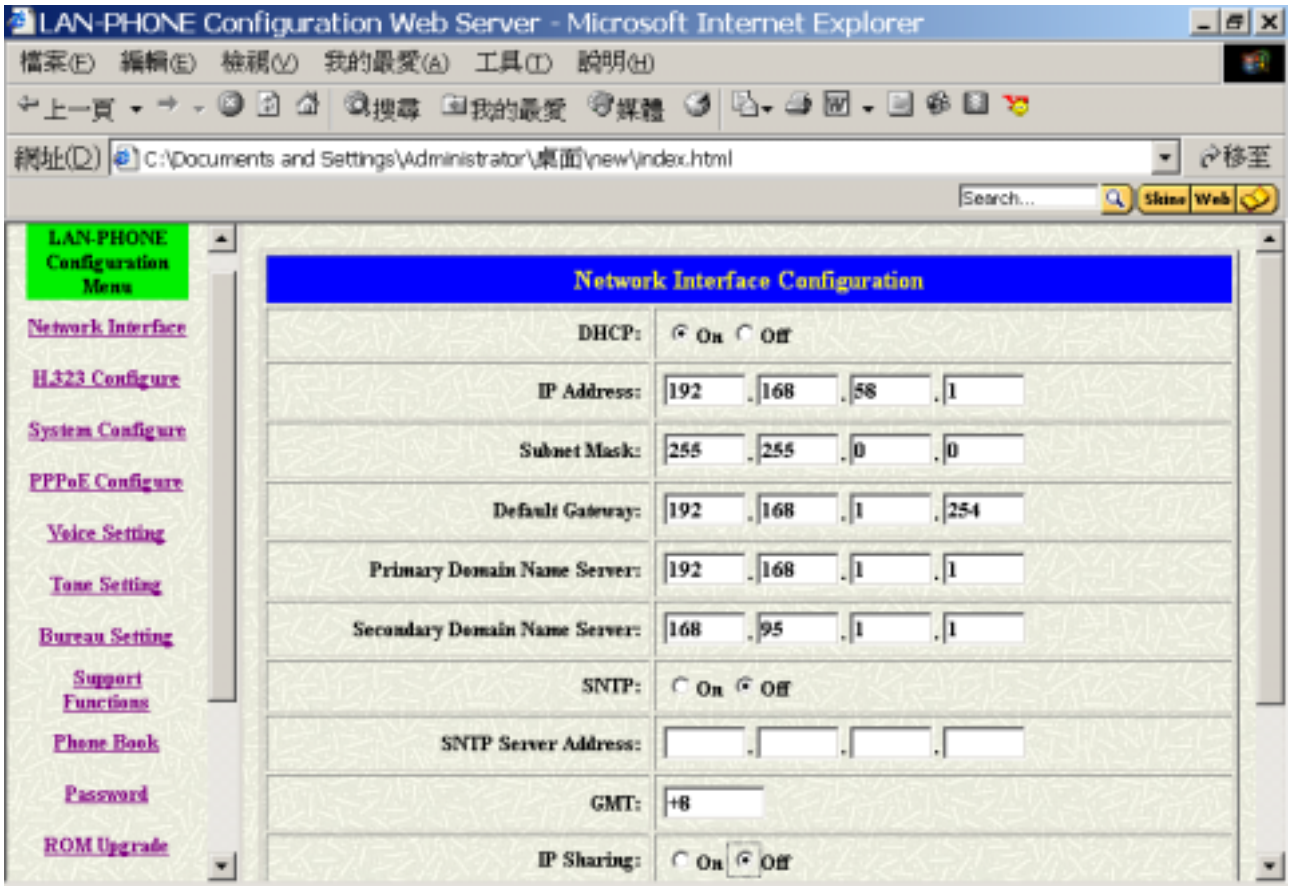
LAN-PHONE Configuration Web Server - Microsoft Internet Explorer
檔案(F) 編輯(E) 檢視(V) 我的最愛(A) 工具(T) 說明(H)
上一頁 搜尋 我的最愛 媒體
網址(D) C:\Documents and Settings\Administrator\桌面\new\index.html
移至
Search...
LAN-PHONE Configuration Menu
Network Interface
H.323 Configure
System Configure
PPPoE Configure
Voice Setting
Tone Setting
Bureau Setting
Support Functions
Phone Book
Password
ROM Upgrade
Network Interface Configuration
DHCP: On Off
IP Address: 192 . 168 . 58 . 1
Subnet Mask: 255 . 255 . 0 . 0
Default Gateway: 192 . 168 . 1 . 254
Primary Domain Name Server: 192 . 168 . 1 . 1
Secondary Domain Name Server: 168 . 95 . 1 . 1
SNTP: On Off
SNTP Server Address: . . .
GMT: +8
IP Sharing: On Off

2. H323 Information

Please refer to chapter **3.12 [h323] command**

- Mode: Select GK mode or Peer-to-Peer mode
- Gatekeeper IP Address: Set Gatekeeper IP Address
- 2nd Gatekeeper IP: Set Redundancy Gatekeeper IP Address
- Gatekeeper Id: Set GateKeeper ID
- Gatekeeper Discovery: Enable/Disable GRQ function
- Registered E.164 Number-01: Set 1st phone number
- Registered E.164 Number-02: Set 2nd phone number
- Registered E.164 Number-03: Set 3rd phone number
- Registered E.164 Number-04: Set 4th phone number
- Registered E.164 Number-05: Set 5th phone number
- Registered E.164 Number-06: Set 6th phone number
- Registered E.164 Number-07: Set 7th phone number
- Registered E.164 Number-08: Set 8th phone number
- Registered E.164 Number-09: Set 9th phone number
- Registered E.164 Number-10: Set 10th phone number
- Registered H.323 ID: Set Registered Alias as H323 ID
- Token Password: Set Token password for H.235 security use
- RTP Port Time to Live (TTL) Gatekeeper finding port RAS Port Response Timeout Connection Timeout: For Advanced User only

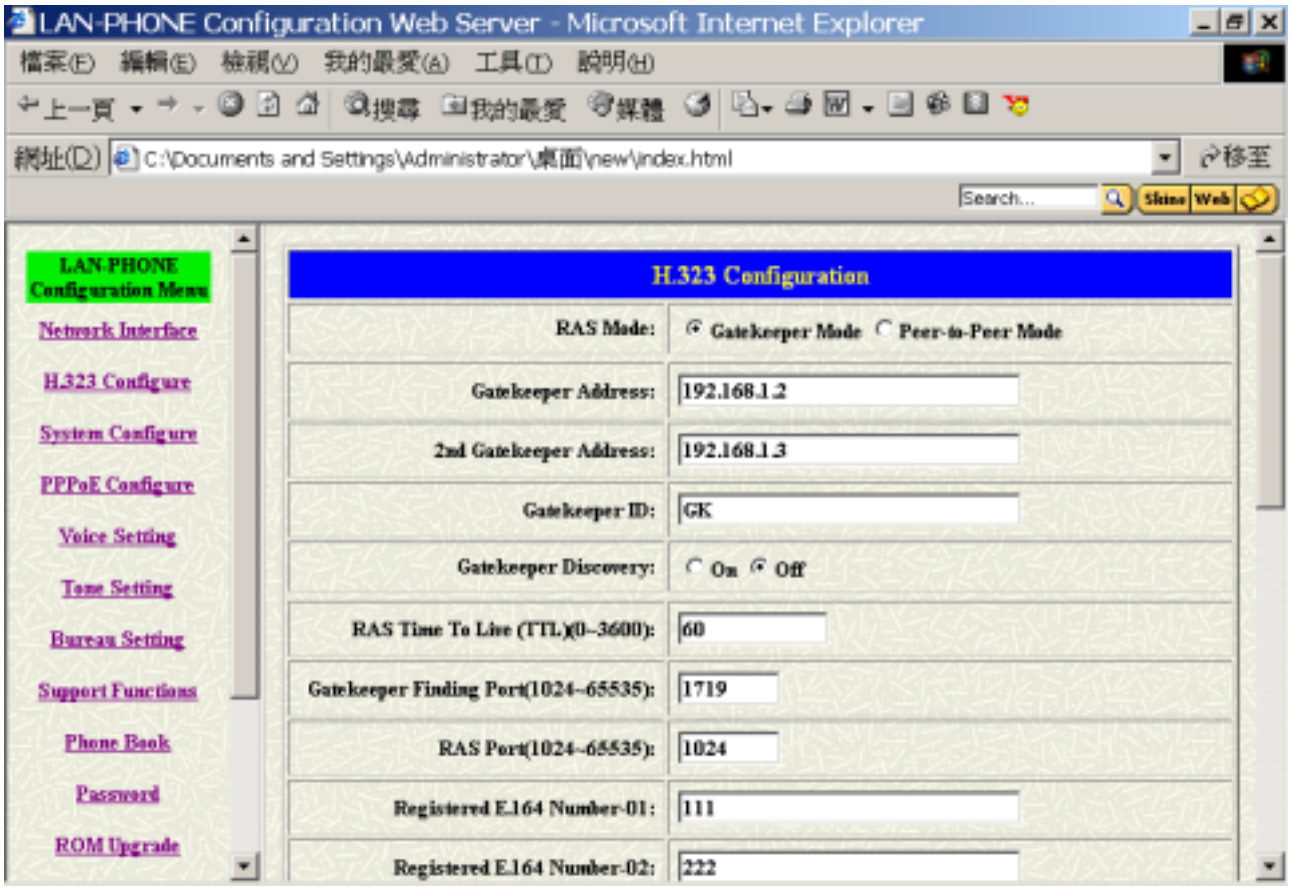
LAN-PHONE Configuration Web Server - Microsoft Internet Explorer
檔案(F) 編輯(E) 檢視(V) 我的最愛(A) 工具(T) 說明(H)
上一頁 搜尋 我的最愛 媒體
網址(D) C:\Documents and Settings\Administrator\桌面\new\index.html
移至
Search...
LAN-PHONE Configuration Menu
Network Interface
H.323 Configure
System Configure
PPPoE Configure
Voice Setting
Tone Setting
Bureau Setting
Support Functions
Phone Book
Password
ROM Upgrade
H.323 Configuration
RAS Mode: Gatekeeper Mode Peer-to-Peer Mode
Gatekeeper Address: 192.168.1.2
2nd Gatekeeper Address: 192.168.1.3
Gatekeeper ID: GK
Gatekeeper Discovery: On Off
RAS Time To Live (TTL)(0~3600): 60
Gatekeeper Finding Port(1024~65535): 1719
RAS Port(1024~65535): 1024
Registered E.164 Number-01: 111
Registered E.164 Number-02: 222

3. System Configure

Please refer to chapter **3.11 [sysconf] command**

- Keypad Type: Select different DTMF Keypad Type (For Advanced User)
- Dial Plan: Set DTMF digit limitation (0 is for any digits)
- Call Alive: Enable the function to check connection (Both side must support)
- Inter Digit Time: Set the DTMF inter digit time (second)
- Digit Type of End of Dialing: Select end of dialing type as none, OK, #, or * .
- H.450 Related Features: Enable/Disable H.450 function.

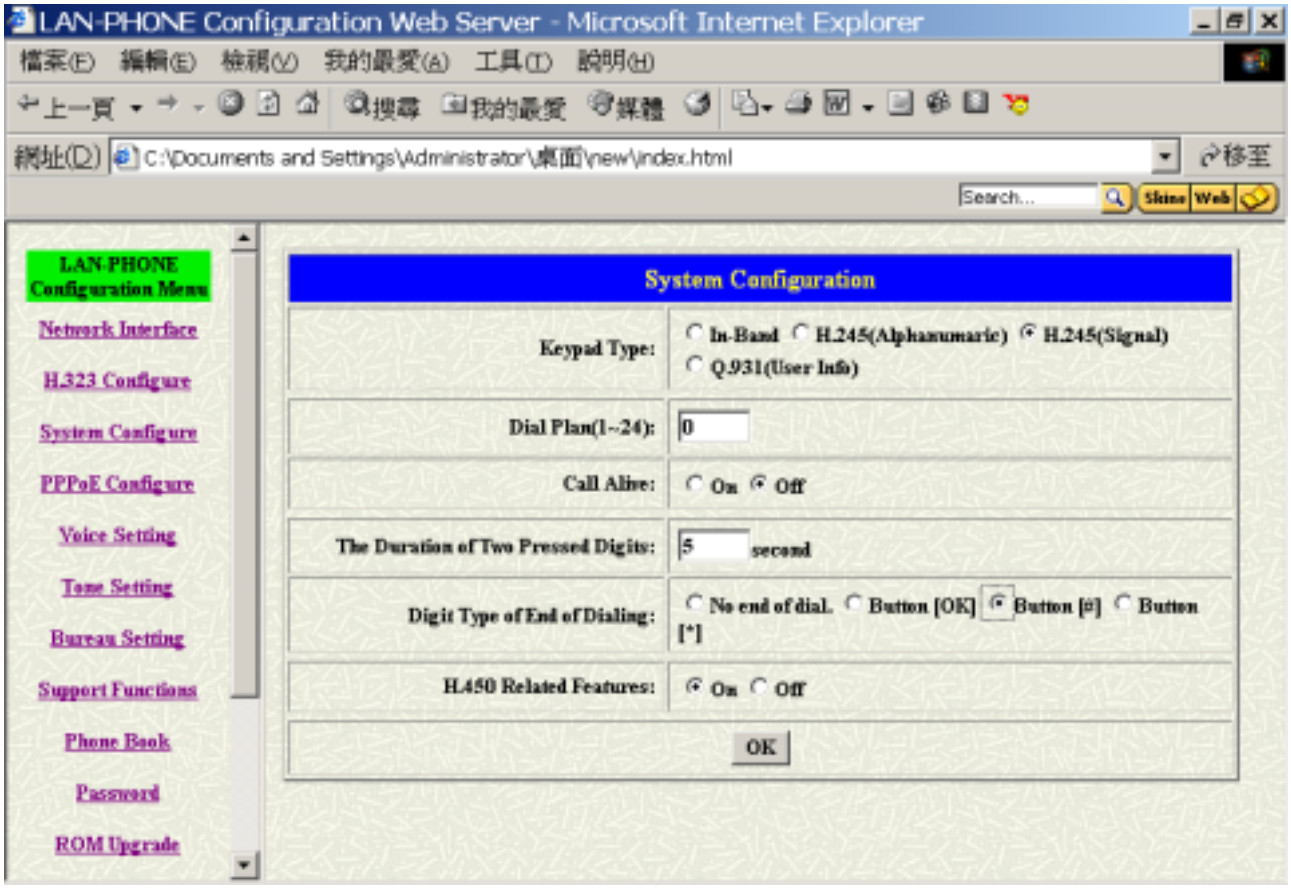

4. PPPoE Configure

Please refer to chapter **3.10 [pppoe] command**

- Device: Enable/Disable PPPoE function
- User Name: Set PPPoE Connection User Name
- Password: Set PPPoE Connection password
- Reboot After Remote Host Disconnection: Enable/Disable auto reboot after PPPoE disconnection
- Other items: After PPPoE connection established, related information will be displayed

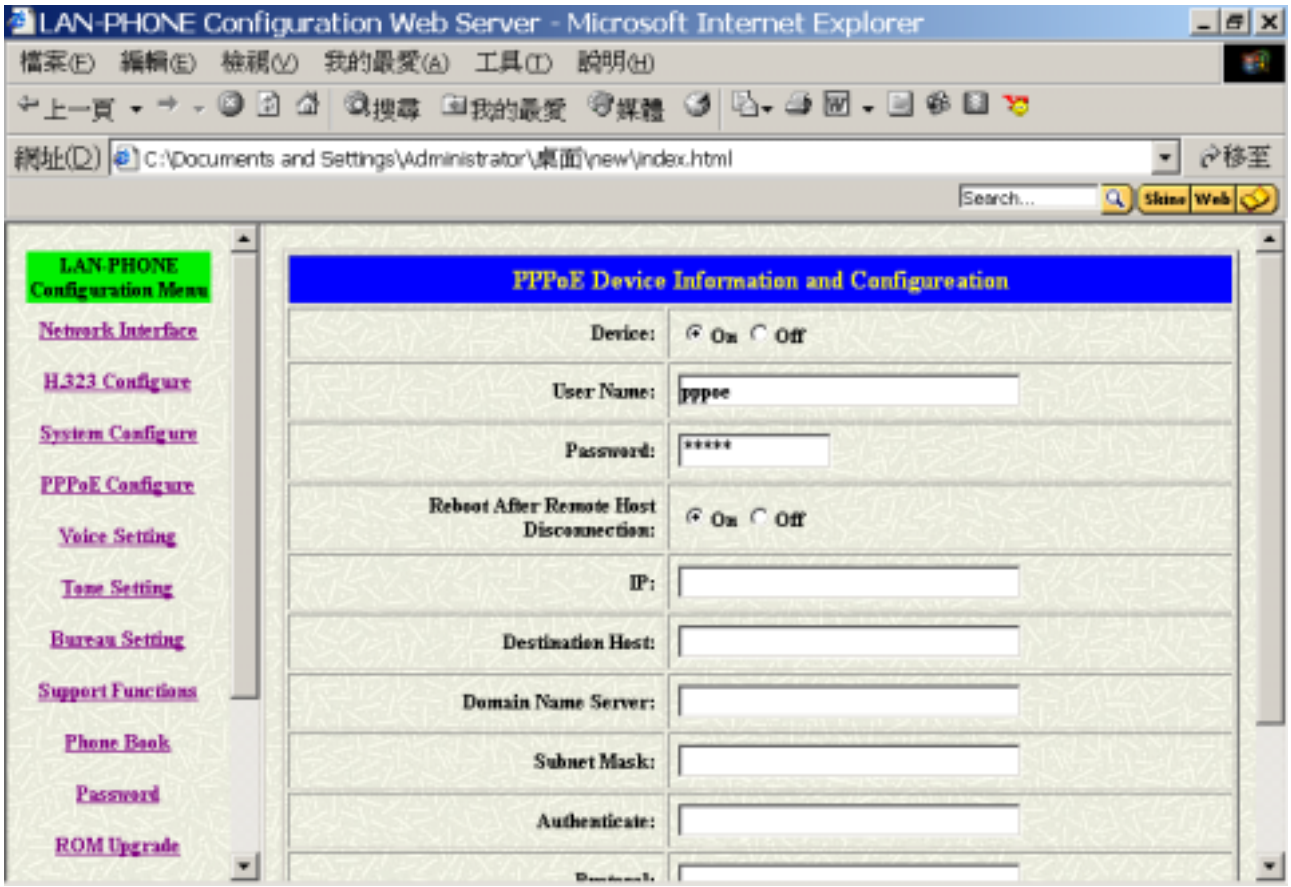

5. Voice Setting (For Advanced User)

Please refer to chapter **3.13 [voice] command**

- Codec Priority: It got wrong order with “Frame Size”. Select the packet size in sending process. (For Advanced User)
- Sending Packet Size: Select the Codec Priority. (For Advanced User)
- G.723 Silence Suppression: Enable / Disable (For Advanced User)
- Volume: Adjust the volume in “Voice” (sending out); “Input” (receiving); “ DTMF” (DTMF sending out) Please Noted the value is limited.
- Echo Cancel: Enable / Disable (suggested always Enable)
- Jitter Buffer: Min. Delay and Max. Delay (For Advanced User)

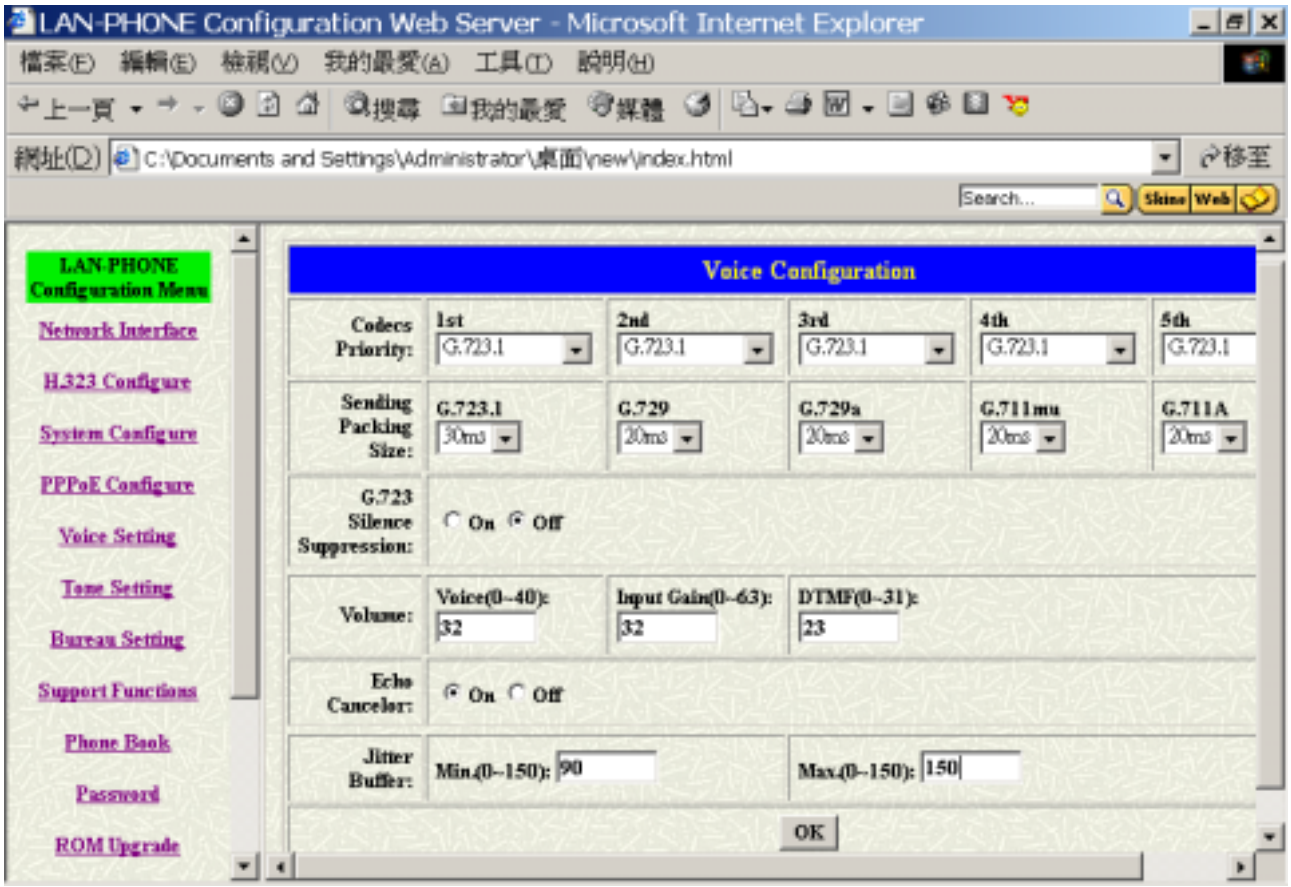

6. Tone Setting (For Advanced User)

Please refer to chapter **3.15 [tone] command**

- Busy Tone:
- Reorder Tone:
- Ring Tone 1
- Ring Tone 2
- Dial Tone:.

  Set the above tone Frequency , Level and On/Off time

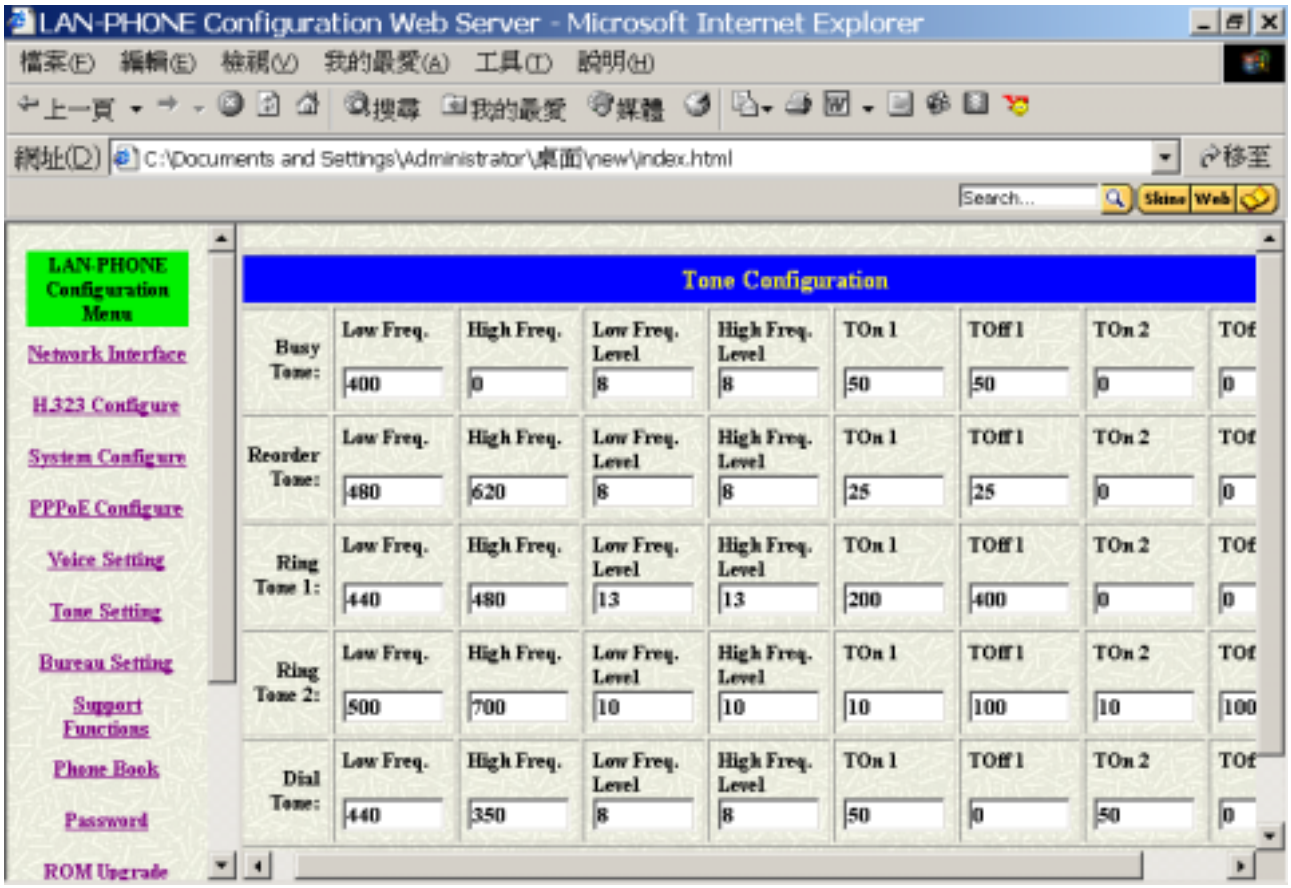
LAN-PHONE Configuration Web Server - Microsoft Internet Explorer
C:\Documents and Settings\Administrator\桌面\new\index.html
LAN-PHONE Configuration Menu
Network Interface
H.323 Configure
System Configure
PPPoE Configure
Voice Setting
Tone Setting
Bureau Setting
Support Functions
Phone Book
Password
ROM Upgrade
Tone Configuration
Busy Tone: 400 0 8 8 50 50 0 0
Reorder Tone: 480 620 8 8 25 25 0 0
Ring Tone 1: 440 480 13 13 200 400 0 0
Ring Tone 2: 500 700 10 10 10 100 10 100
Dial Tone: 440 350 8 8 50 0 50 0

7. Bureau Setting

Please refer to chapter **3.17 [bureau] command**

- Hold Tone Generation(using PCM file): Enable/Disable hold tone generation

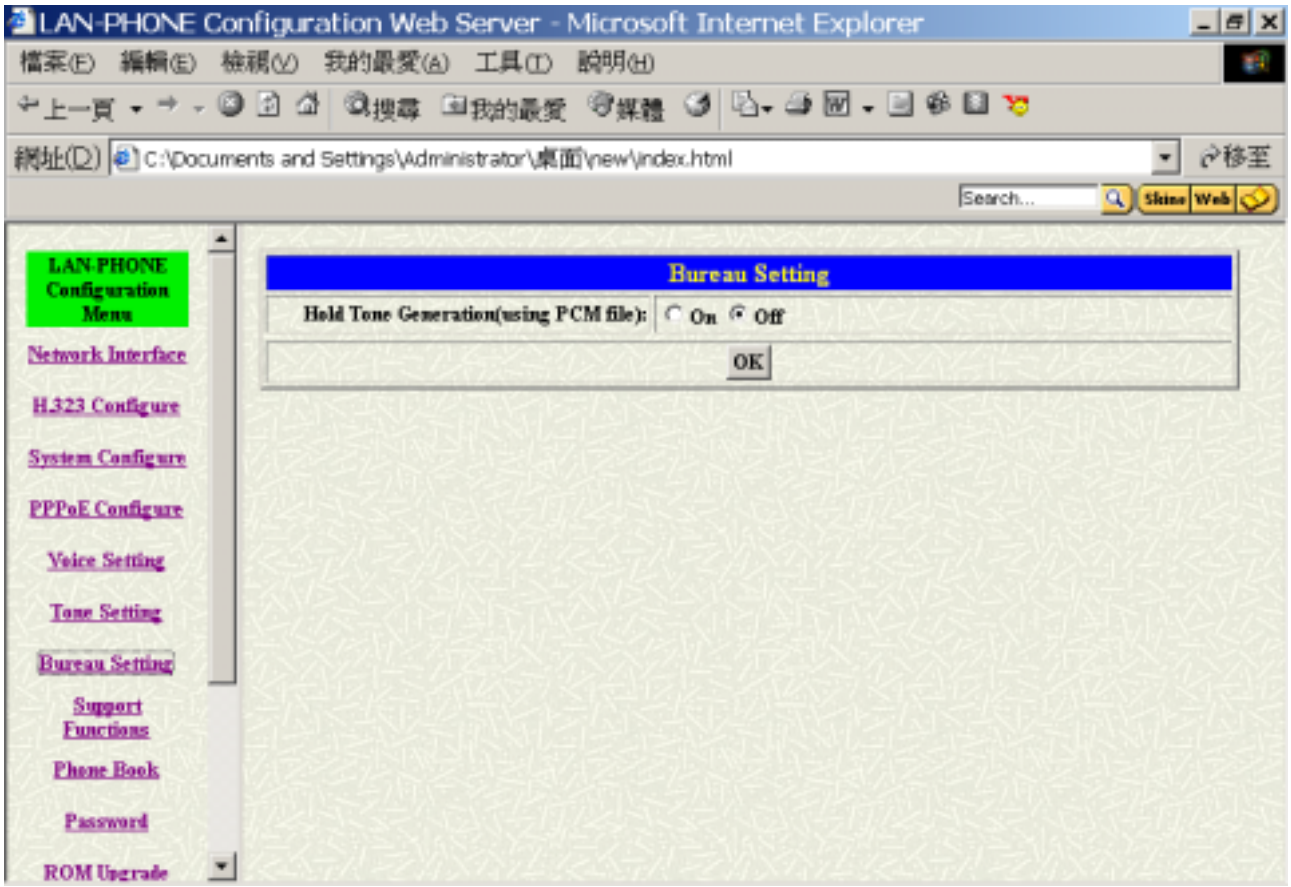

8. Support Functions (Both side must support)

Please refer to chapter **3.16 [support] command**

- Fast Start: Enable to do Fast Start
- H.245 Tunneling: Enable to open H.245 Tunneling
- H.245 Separate Channel: Enable/Disable open H.245 channel after fast start connection

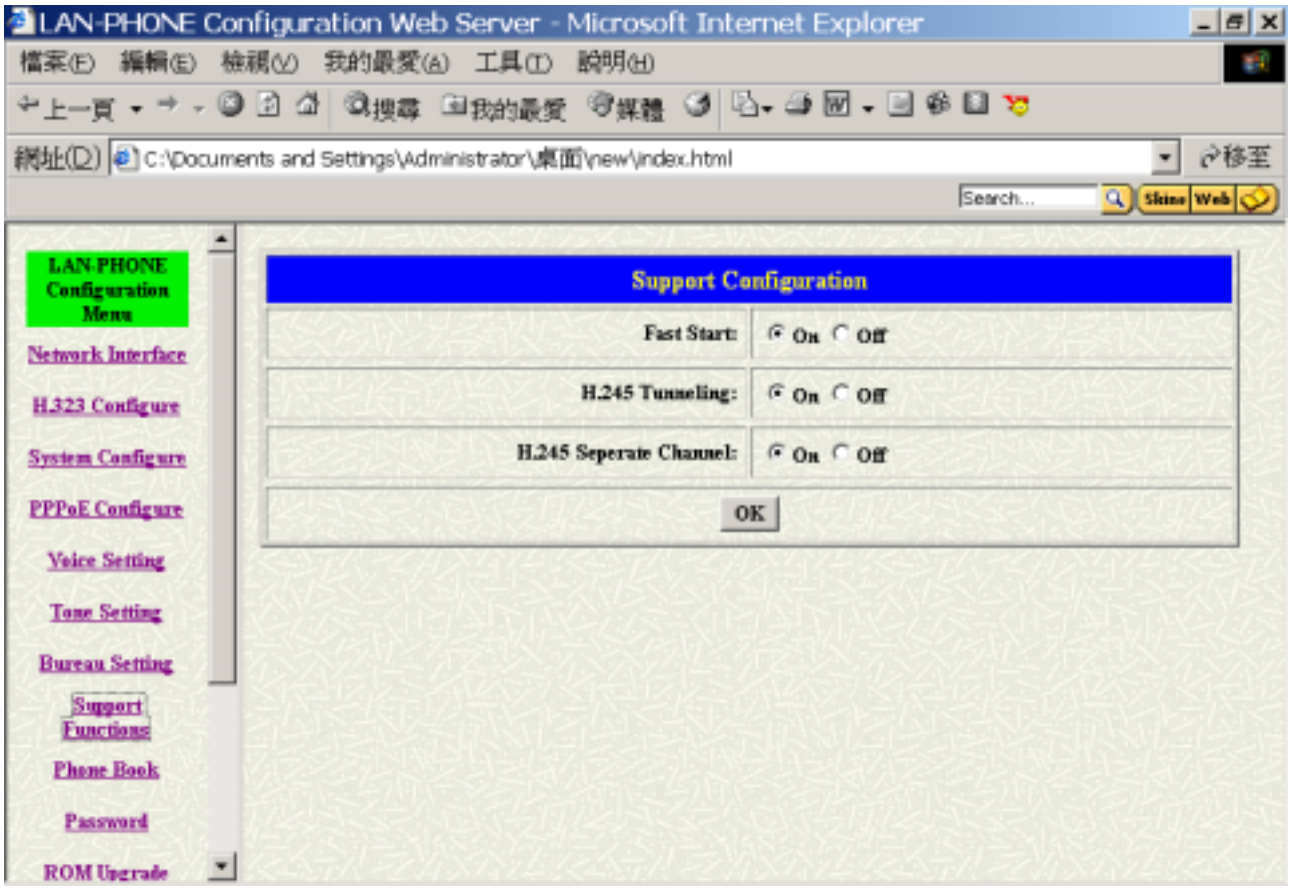

9. Phone Book (For Peer-to-Peer mode only)

Please refer to chapter **3.9 [phone] command**

Input the Name, IP Address and E.164 No. of the destination device.

Please Note: The E.164 No. will not be carried together to the destination side. It is said if the destination side is requested to match its E.164 No. (Line No.), user can input any digit he wished.

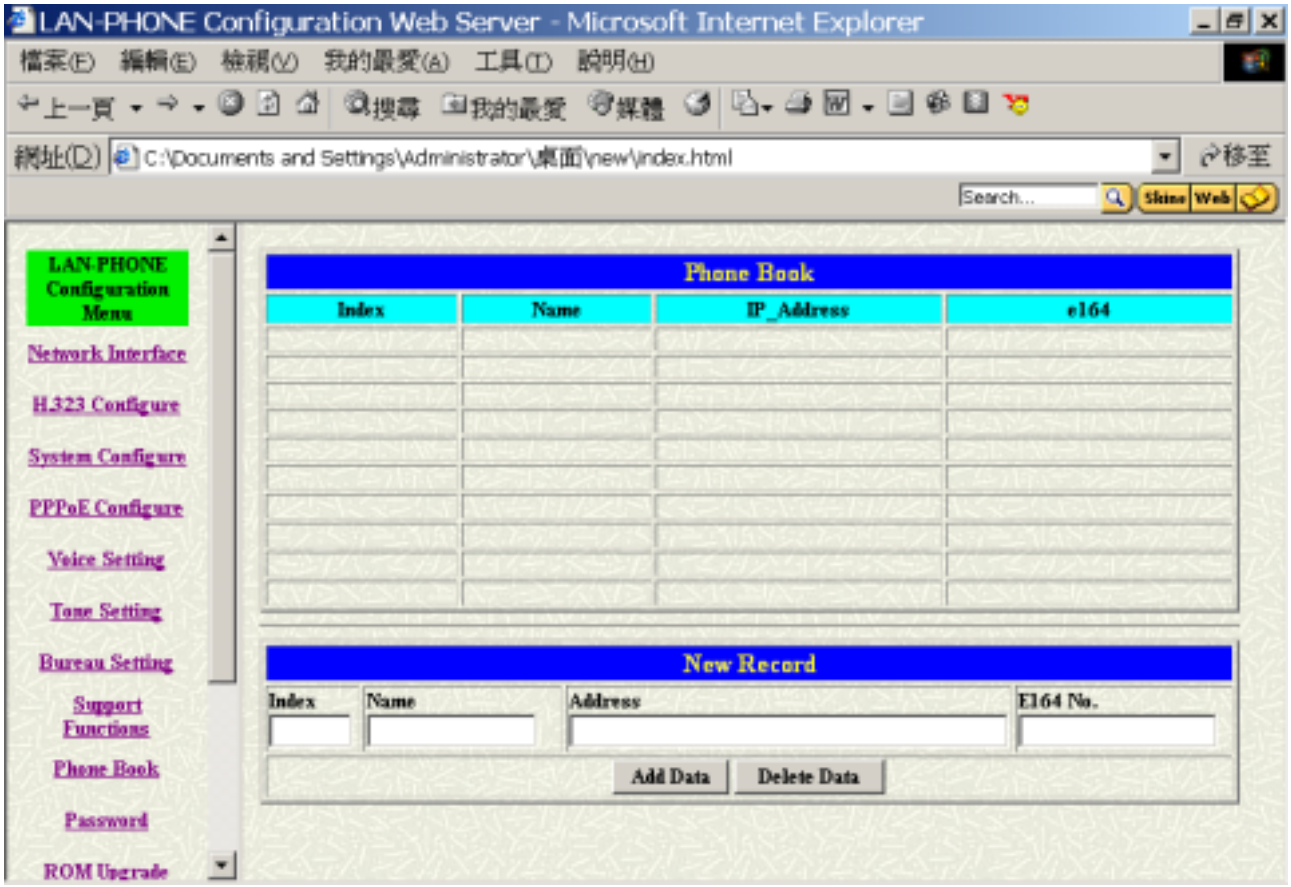

10. Password

Please refer to chapter **3.19 [password] command**

First select login name as root or administrator, then enter current password , new password and confirm new password again.

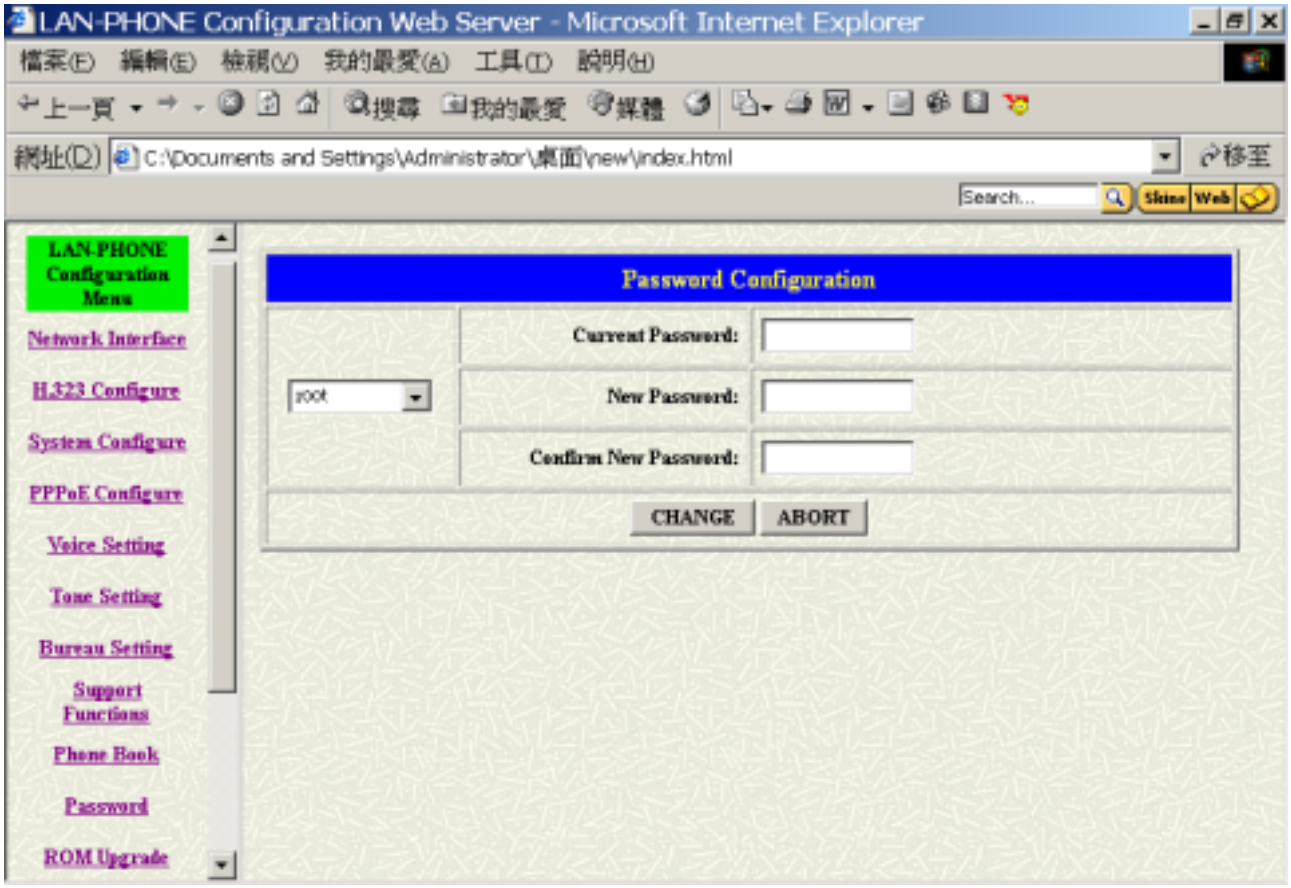

11. ROM Upgrade

Please refer to chapter **3.18 [rom] command**

- TFTP Server IP Address: Set TFTP server IP address
- Target File name: Set file name prepared to upgrade
- Method: Select download method as TFTP or FTP
- FTP Server IP Address: Set FTP server IP address
- FTP Login: Set FTP login name and password
- Target File Type: Select which sector of IP Phone to upgrade

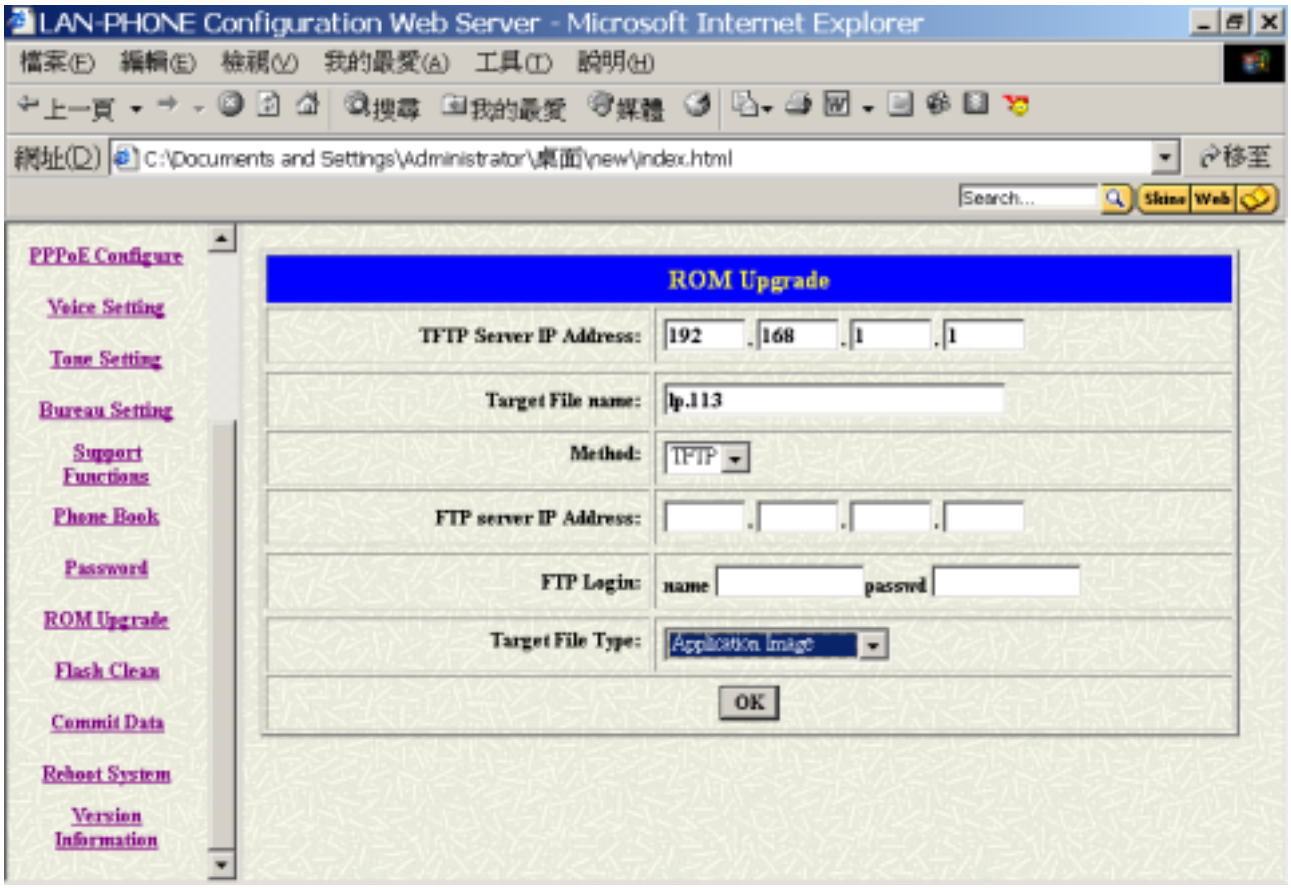

12. Flash Clean

Please refer to chapter **3.4 [flash] command**

Press CLEAN will clean all configurations of IP Phone and reset to factory default value.
Please be noted: Once execute this function, user must re-configure all commands all over again.

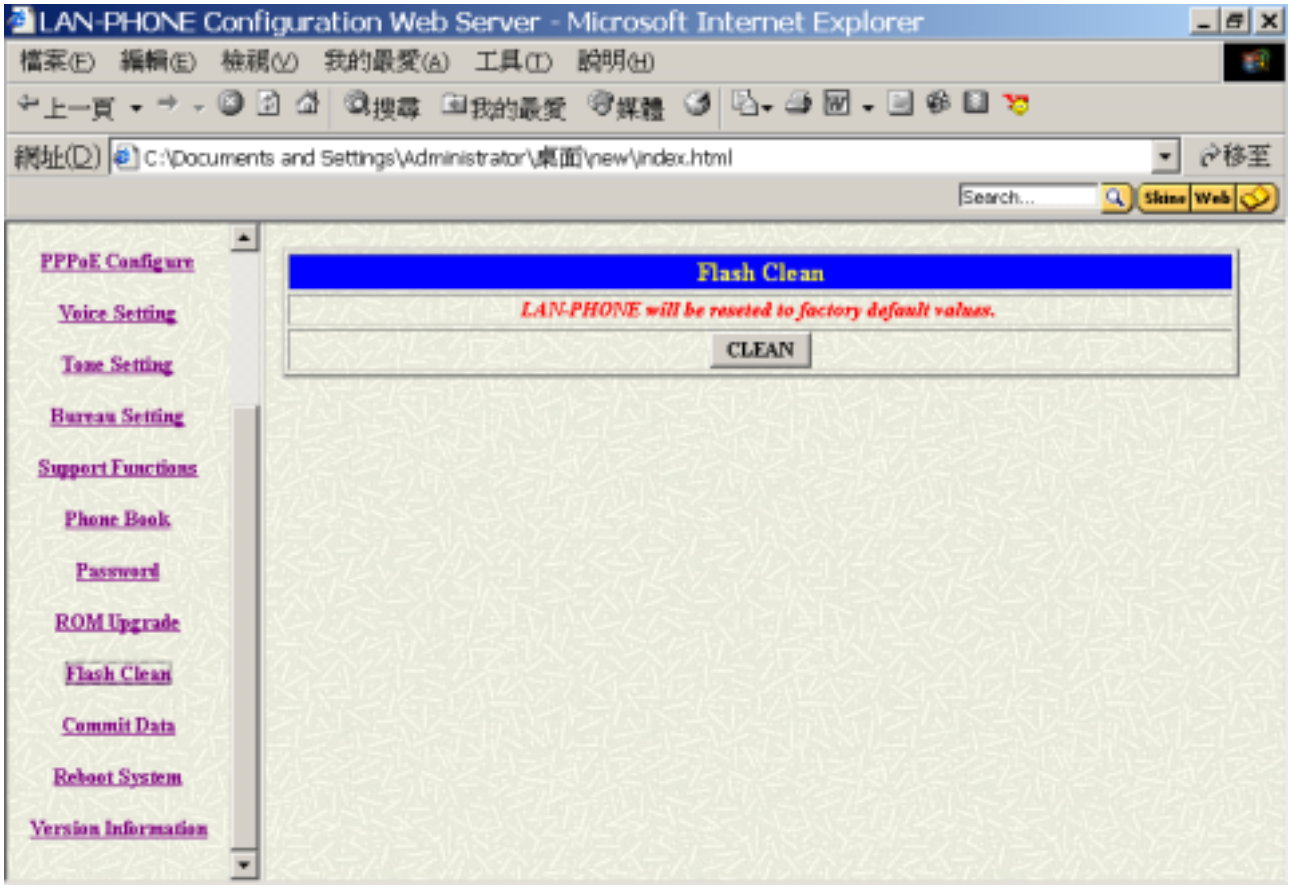

13. Commit Data

Please refer to chapter **3.5 [commit] command**

After configuration, user has to commit data then reboot machine.

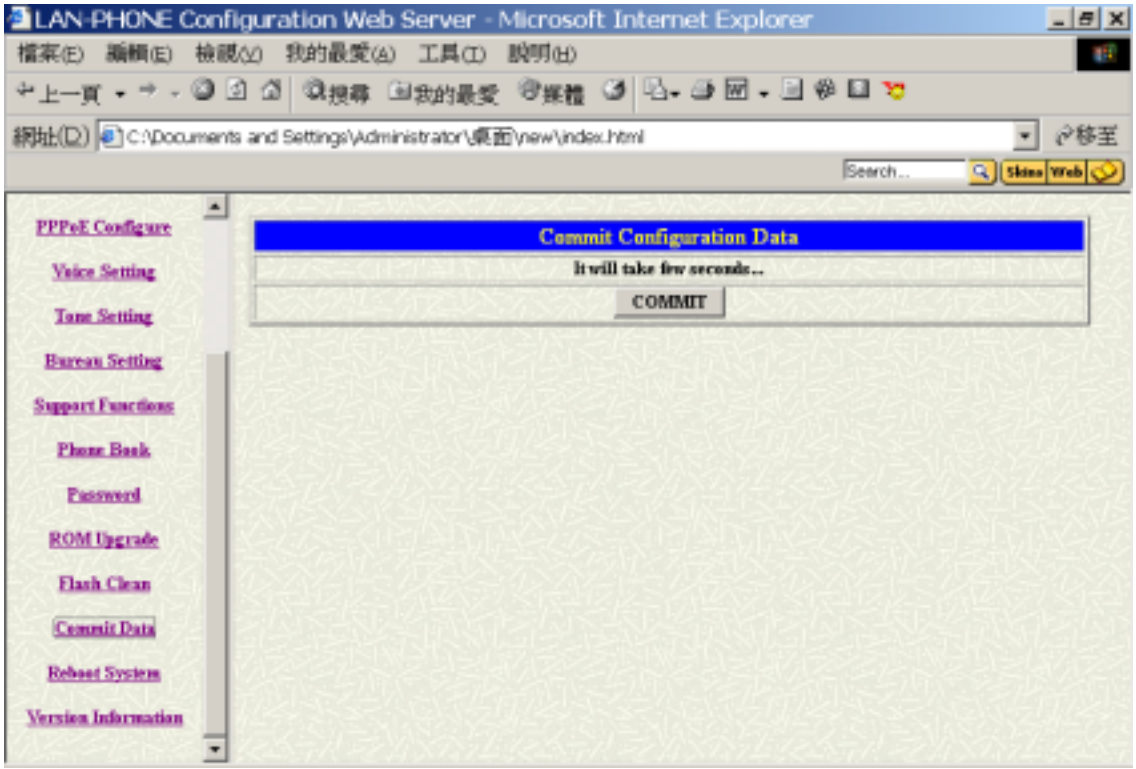

14. Reboot System

Please refer to chapter **3.3 [reboot] command**

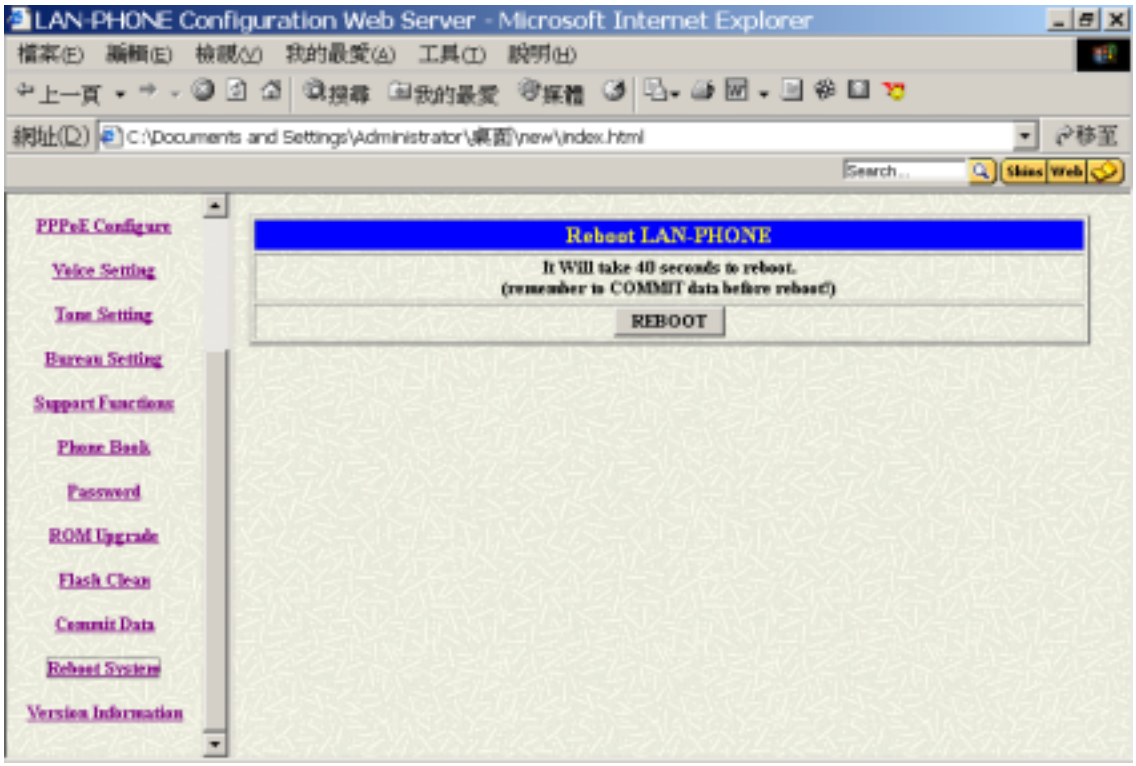

15. Version Information

Please refer to chapter **3.18 [rom] command**

User can see all S/W versions.

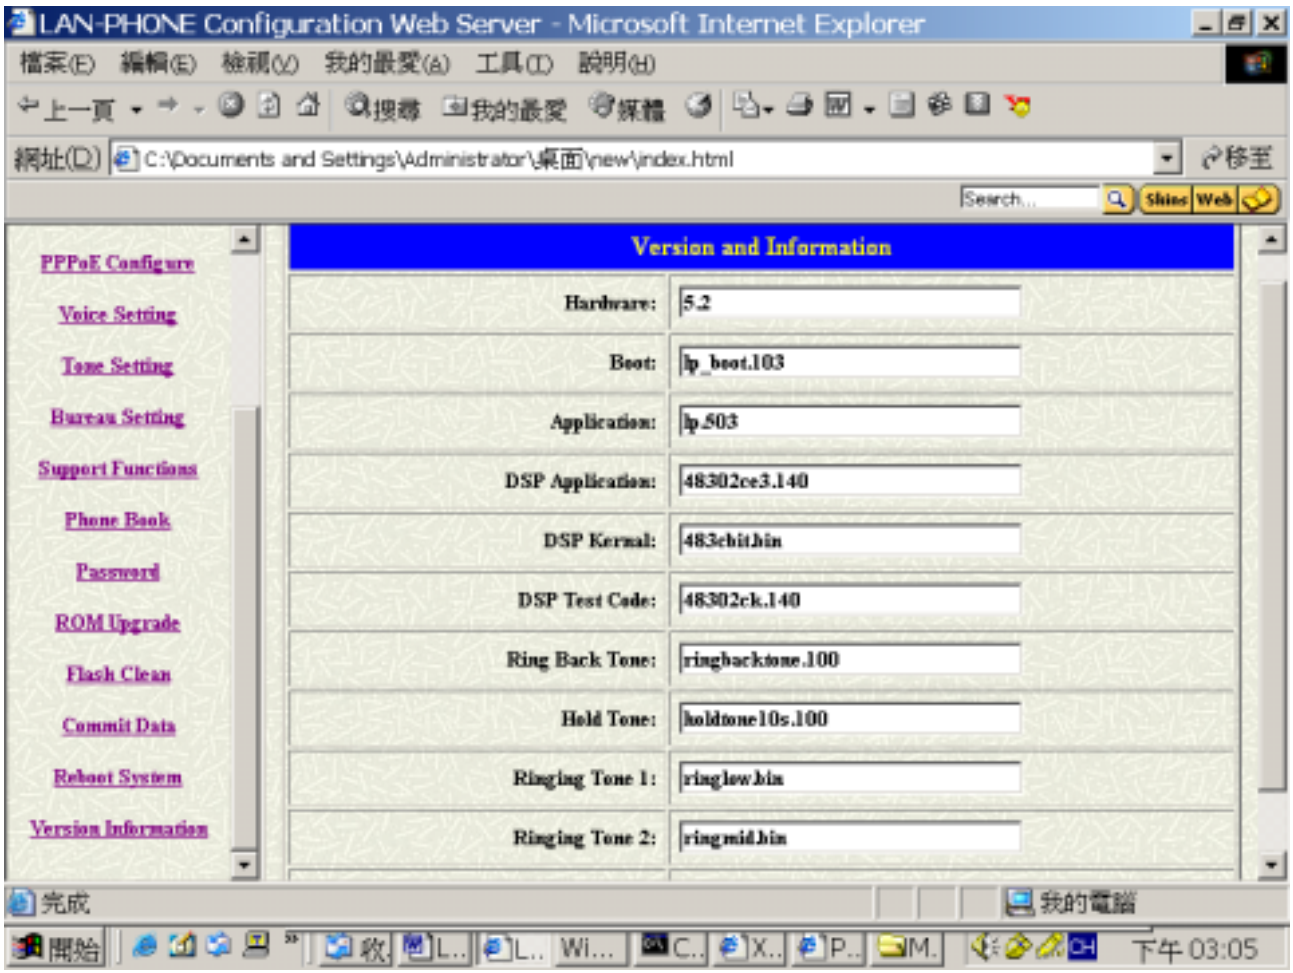

Note: If there is item can't be found on web site, please configure them by telnet.

Chapter 5 Upgrade the IP Phone 100

IP Phone 100 supports two methods to upgrade the new version released from TTIC. Both methods are necessary to prepare the **TFTP** program on the host PC as **TFTP server**. After installing **TFTP** program on one PC and connecting to network, IP Phone 100 is ready to be upgraded.

1. LCD Panel Control
2. Remote Control: Telnet
3. Web Management

＊Download Procedure

1.LCD Panel Control

1.Choose the 1→3 selection-**Firmware Upgrade.** Press **OK** to enter into the sub-selection as below.

2.Download method

There are two methods to download new rom file, please move the "~" symbol by press ← or → on the keypad to select TFTP or FTP method, then press OK to confirm it.

3.Set File Server IP

User has to offer one TFTP/FTP server IP Address and set this IP Address on the IP Phone keypad. The IP address is necessary for upgrading IP Phone new application rom file.

4.Set FTP user account

User has to press user name and password for FTP server login .It is necessary for upgrading IP Phone new application rom file in FTP method.

5.Indicate file name

User has to press the file name of new application rom file prepared for upgrading

6.Start Download

Press OK to start download new application rom file .

7.Firmware Version

Show versions of all rom files.

Note: Download via LCD command can only upgrade new ***application*** rom file.

2.Remote Control: Telnet

Associated with the Chapter 3.18 **[rom] command**:

1. **-print**: show versions of all rom files.
2. **-app**,**-boot**, **-dsptest**, **-dspcore**, **-dspapp**, **-rbpcm** and **-htpcm**: upgrade main boot code, main application code, DSP testing code, DSP kernel code, DSP application code, Ring Back Tone PCM file and Hold Tone .
3. **-s**: it is necessary to prepare TFTP/FTP server IP address for upgrading rom file.
4. **-f**: the file name prepared for upgrading is necessary as well.
9. **–server**: specify TFTP/FTP server IP address. It is corresponding to LCD configuration -firmware upgrade-Set file Server IP.
10. **–method**: specify download method to be TFTP or FTP(0 for TFTP.1 for FTP)
11. **–ftp**: specify user name and password for FTP download method

For example: User prepares to upgrade the latest app rom file – wtlp.103c, the TFTP server is 192.168.4.101.

rom –app –s 192.168.1.1 –f lp.100 (If –server is specified , can just type **rom –app –f lp.100**)

```
usr/config$ rom
ROM files updating commands
Usage:
rom [-print] [-boot] [-app] [-dsptest] [-dspcore] [-dspapp] [-rbpcm] [-htpcm]
     -s TFTP/FTP server ip -f filename
rom [-method mode] [-ftp username password] [-server serverIP]
rom -print
    -print     show versions of rom files. (optional)
    -boot      update main boot code(optional, only root user has authority.)
    -boot2m    update 2M code(optional, only root user has authority.)
    -app       update main application code(optional)
    -dsptest   update DSP testing code(optional)
    -dspcore   update DSP kernel code(optional)
    -dspapp    update DSP application code(optional)
    -rbpcm     update RingBack Tone PCM file(optional)
    -htpcm     update Hold Tone PCM file(optional)
    -s         IP address of TFTP/FTP server (mandatory)
    -f         file name(mandatory)
    -server    TFTP/FTP server IP address (store server IP in flash)
    -method    download via TFTP/FTP (TFTP: mode=0, FTP: mode=1)
    -ftp       specify username and password for FTP
Note:
This command can run select one option in 'app', 'dsptest', 'dspcore',
 'dspapp', and 'rbpcm'.
Note:
    Once downloading server IP address is set via -server option,
    user can omit the -s option the next time when downloading.
    We keep -s option for backward compatibility.
Example:
    rom -method 1
    rom -ftp vwusr vwusr
    rom -server 192.168.4.101
    rom -app -f app.bin
```

3.Web Management

Please refer to chapter **3.18 [rom] command**

- TFTP Server IP Address: Set TFTP server IP address
- Target File name: Set file name prepared to upgrade
- Method: Select download method as TFTP or FTP
- FTP Server IP Address: Set FTP server IP address
- FTP Login: Set FTP login name and password
- Target File Type: Select which sector of IP Phone to upgrade

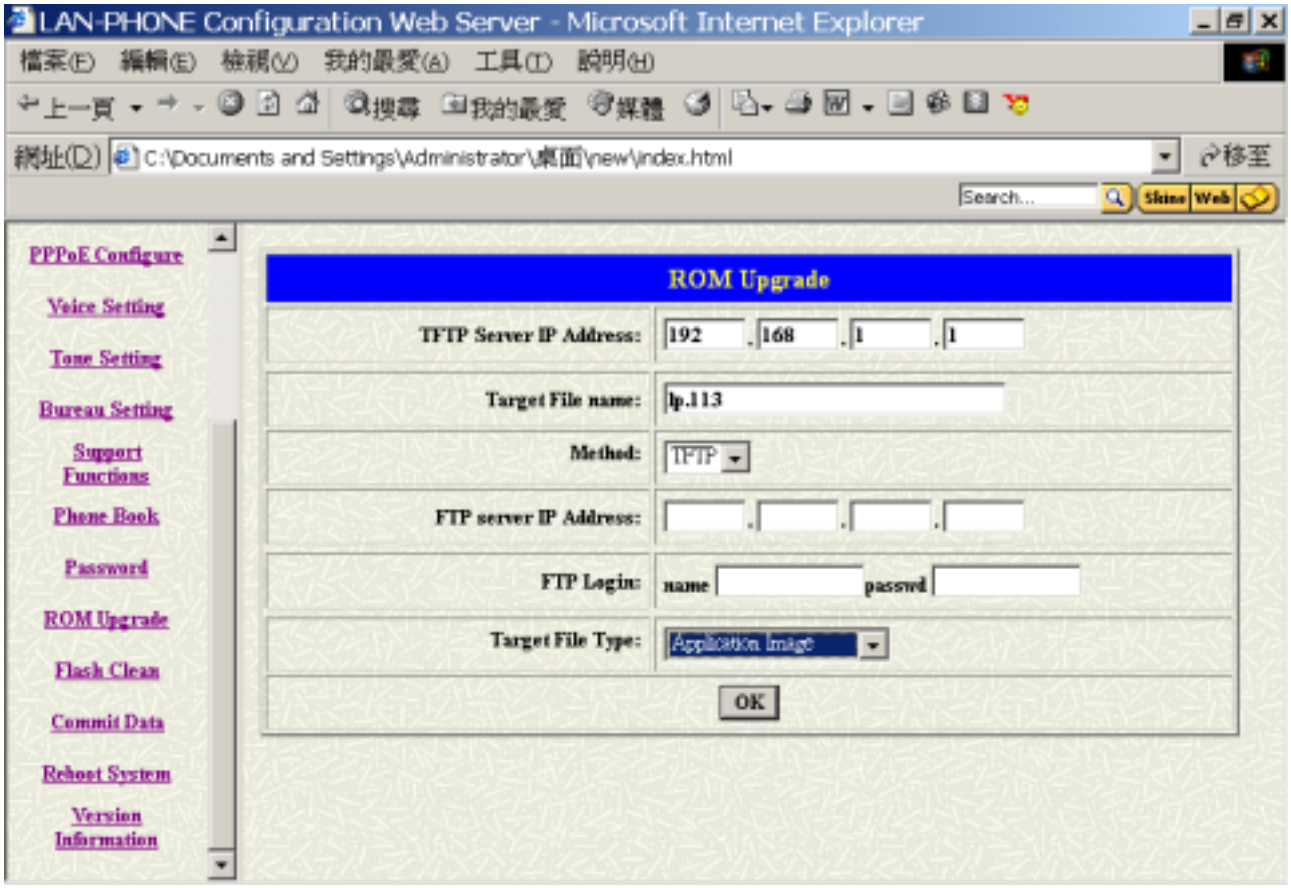

TATUNG TTIC® A joint venture of Tatung,Taiwan & NEC,Japan
TAIWAN TELECOMMUNICATION INDUSTRY CO., LTD.
No.4, Min Hsiang Street, Chung Ho, Taipei County, Taiwan, 235, R.O.C
TEL:886-2-2222-1100 EXT262 FAX:886-2-2223-7316 Http:// www.ttic.com.tw

ISO-9001
ISO-14001
OHSAS-18001